 



User Guide

Digital Interface

K-657, K-694

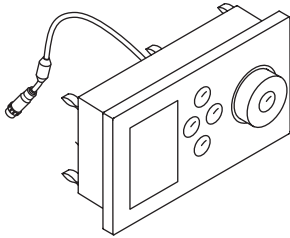

 K-658, K-695

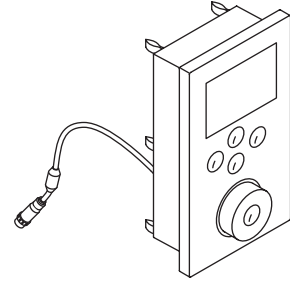


M product numbers are for Mexico (i.e. K-12345**M**)
Los números de productos seguidos de **M** corresponden a México
(Ej. K-12345**M**)

THE BOLD LOOK
OF **KOHLER**®

Table of Contents

| | |
|---|----|
| Interface Anatomy | 4 |
| Turn On Your Interface | 4 |
| Navigating Through the Menus | 4 |
| Operating without the Dial Ring | 5 |
| Using Your Shower | 6 |
| Turn Water Outlets ON or OFF | 8 |
| Choose Massage Function | 9 |
| Adjust Cycling Speed | 10 |
| Temperature Therapy Options | 11 |
| Changing Temperature Therapy Temperatures | 13 |
| Using Lights | 14 |
| Lights ON/OFF | 15 |
| Incandescent Brightness | 16 |
| Chroma Brightness | 17 |
| Choose Color | 18 |
| Choose Custom Color | 19 |
| Lighting Effects | 20 |
| Save Lights Settings | 20 |
| Using Music | 21 |
| Your Music Library | 22 |
| Internet Radio | 23 |
| Additional Audio Devices | 24 |
| Using Steam | 25 |
| Steam On | 26 |
| Save Steam Settings | 26 |
| Using User Presets | 26 |
| Save As | 28 |
| Main Menu | 29 |
| Turn OFF Individual Devices | 30 |
| Configurations | 31 |
| Frontage | 32 |
| Envelop | 33 |
| Unwind | 34 |
| Linear | 35 |
| Downpour | 36 |
| Surround | 37 |
| Custom | 38 |
| The Settings Menus | 39 |
| Interface Settings | 40 |
| Settings Lock | 41 |
| Clean | 43 |
| Time and Date | 44 |
| Contrast | 46 |
| Brightness | 47 |
| Invert Screen | 48 |
| Beep | 49 |
| Auto Dim | 50 |
| Auto Return | 51 |
| Auto Lock | 52 |
| Select Language | 53 |
| Select Temperature Unit | 54 |
| Power OFF | 55 |
| User Settings | 57 |
| Shower Settings | 58 |
| Set the Default Temperature | 59 |
| Set the Maximum Temperature | 60 |
| Activate the Massage Functions | 61 |
| Activate Temperature Therapy | 62 |
| Auto Purge | 63 |

| | |
|---|-----|
| Change Water Outlet List Order | 64 |
| Add/Remove Water Outlets from Cycling Pattern | 65 |
| Cycling Speed | 66 |
| Cold Water OFF | 67 |
| Select Primary Water Outlet – Custom Only | 68 |
| Light Settings | 69 |
| Activate Light | 70 |
| Light Fade | 71 |
| Incandescent Brightness | 72 |
| Color Brightness | 73 |
| White Light | 74 |
| Chroma Lighting Effect Speed | 75 |
| Music Settings | 76 |
| Volume Preset | 77 |
| Treble | 78 |
| Bass | 79 |
| Balance | 80 |
| Shuffle | 81 |
| Repeat | 82 |
| Default Dial | 83 |
| Steam Settings | 84 |
| Steam Temperature | 85 |
| Steam Timer | 86 |
| Steam Power Clean | 87 |
| System Settings | 88 |
| About | 89 |
| Valve | 90 |
| Set the Valve Configuration – Preset Options | 91 |
| Set the Valve Configuration – Custom Options | 93 |
| Service | 95 |
| Hospitality Mode | 96 |
| Diagnostics | 98 |
| Error Log | 99 |
| WiFi Security | 100 |
| Update Music Software | 101 |
| Roku Agreement | 102 |
| Roku Services | 103 |
| Roku IP Address | 104 |
| Version | 104 |
| Reset Function – User Settings | 105 |
| Reset Function – System | 106 |
| Start-up After System Reset | 107 |
| Music Server Set-up – Getting Started | 108 |
| Compatible Music Servers | 108 |
| Enable Music Sharing | 109 |
| Adding Internet Stations | 110 |

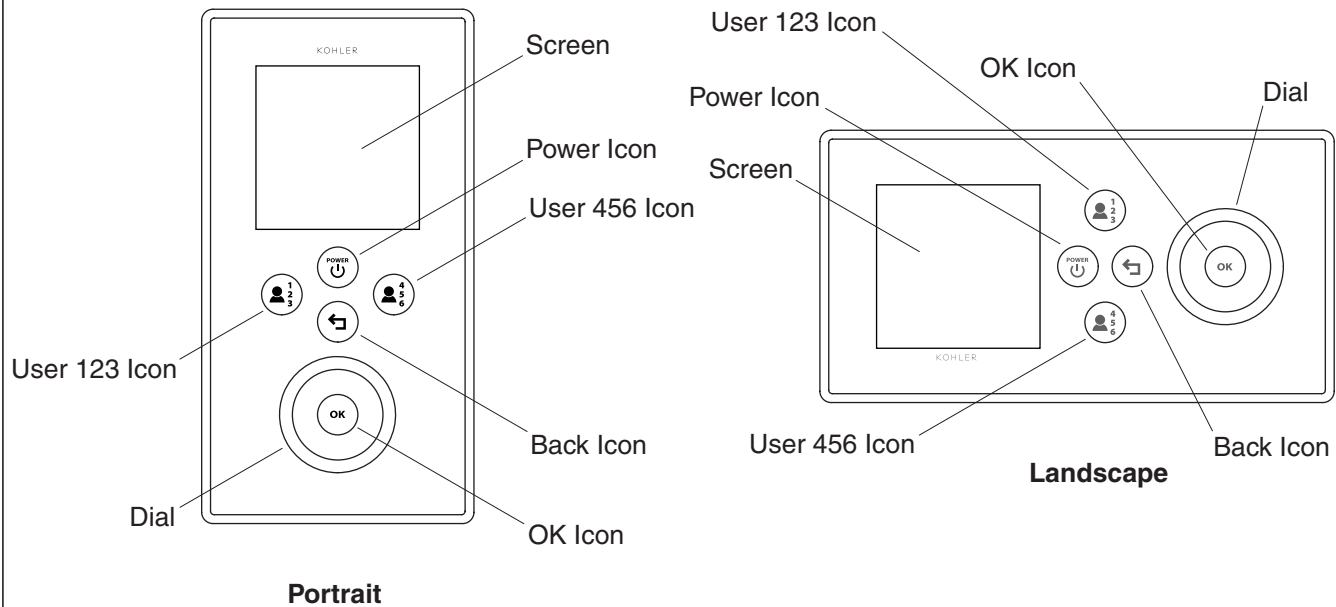 

Interface Anatomy

Turn On Your Interface

Path: [Power Icon]

After a period of inactivity, your interface will enter sleep mode. When in sleep mode, the power icon will be lit by a pulsing green light. If this is not the case, verify the interface(s) and power cables are plugged into the valve media module and the power supply cord is plugged into the outlet.

- Press the [Power Icon] to turn the interface on.


Navigating Through the Menus

Scrolling through the menu items: Use the dial to scroll through and highlight the various menu items.

Selecting the highlighted menu item: Press the [OK Icon] to select the highlighted menu item.

Example path: [Icon] > menu item 1 > menu item 2

The above example path directs you to press the [Icon], then indicates that you would scroll to and then select “menu item 1” by pressing the [OK Icon], and then scroll to and select “menu item 2.”

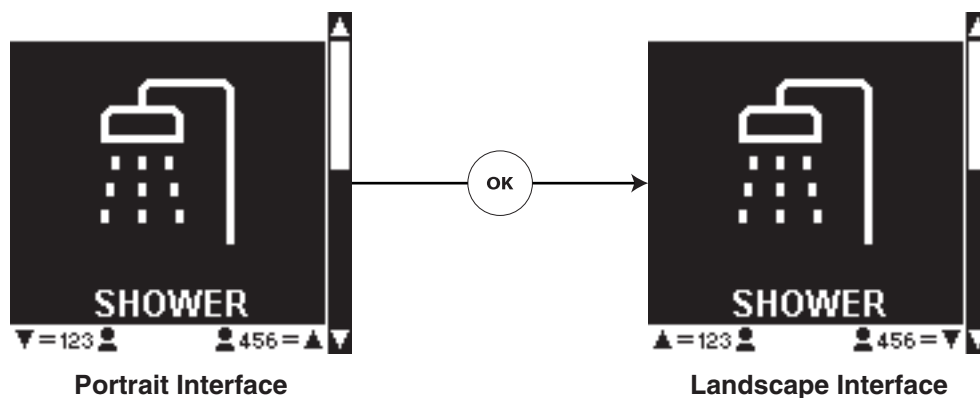

Operating without the Dial Ring

If your dial ring is lost or misplaced, you can still use your interface by activating the alternate scroll mode.


NOTE: When the alternate scroll is activated, the user presets will not be available.

When on the main "Shower" or "Settings" screen, the alternate scroll mode can be activated by pressing and holding the [Back Icon] for 8 seconds.

For Portrait Interfaces: Once activated, the [123 User Icon] will allow you to scroll down and the [456 User Icon] will allow you to scroll up. Press the [OK Icon] to select the highlighted option.

For Landscape Interfaces: Once activated, the [123 User Icon] will allow you to scroll up and the [456 User Icon] will allow you to scroll down. Press the [OK Icon] to select the highlighted option.

- To deactivate the alternate scroll mode, press and hold the [Back Icon] for 8 seconds or replace and turn the dial ring.

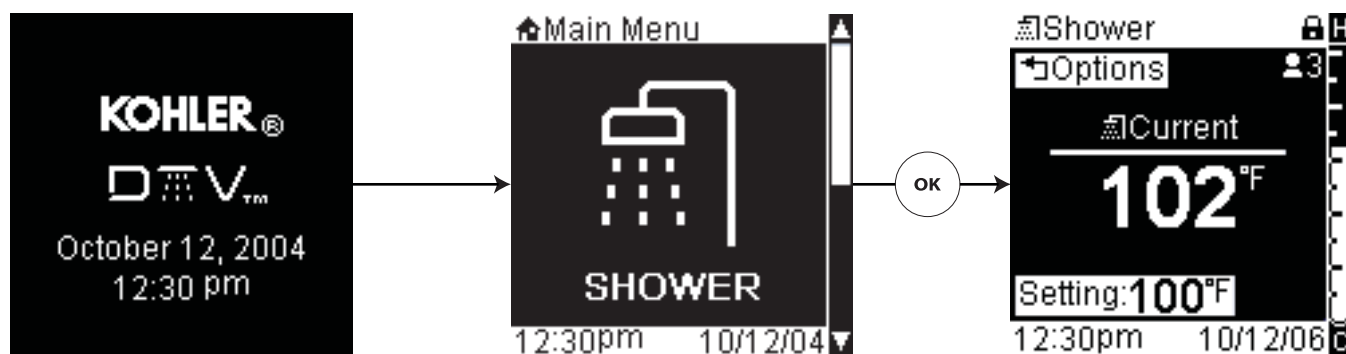

Using Your Shower

IMPORTANT! The interface must be set up according to your chosen valve configurations before proceeding. If the configuration has not yet been selected in your interface, refer to the "Set the Valve Configuration - Preset Options" or "Set the Valve Configuration - Custom Options" section.

- To begin using your shower, use the dial to scroll to the shower screen.
- Press the [OK Icon] to select and turn on your shower.

If your user presets are already set, refer to the "Using User Presets" section.

- At any time, the shower can be turned OFF by pressing the [Power Icon].

The water will turn on and you will see a temperature screen displaying the current temperature and the set temperature.

If you have the auto purge function activated: All the water outlets (with the exception of any handshowers) will turn on and remain on until the set temperature is reached. (See the "Auto Purge" section for instructions to turn this feature ON or OFF.)

Once the set temperature is reached all outlets except the designated primary showerhead will turn off. (See the "Select Primary Water Outlet" section for more information on selecting or changing your primary water outlet.)

If the auto purge function is not activated: The primary water outlet, usually a single showerhead, will turn on. (See the "Select Primary Water Outlet" section for more information on selecting or changing your primary water outlet.)

- Use the dial to adjust the temperature up or down as desired.


In addition to the primary showerhead, you can also turn individual water outlets ON or OFF. Refer to the "Turn Water Outlets ON or OFF" section.

The shower mode options consist of:

- **All On** – turns all water outlets ON or OFF
- **List of Water Outlets** – turns specific water outlets ON or OFF
- **Massage** – selects massage cycling pattern
- **°F Therapy** – selects hot and cold therapy options
- **Lights** – turns incandescent and/or chroma lights ON or OFF also allows adjustment of color (chroma only) and brightness (This menu item is only visible if this component is connected.) Refer to the "Using Lights" section.
- **Music** – allows for the selection of music from a music server, internet radio, or other audio device connected via the "Line In" jack. Refer to the "Using Music" section.

Using Your Shower (cont.)

- **Steam** – turns the steam ON or OFF and allows temperature adjustment of steam (This menu item is only visible if this component is connected.) Refer to the “Using Steam” section.
 - **Save As** – saves current settings to a user preset
 - **Main Menu** – returns to the main menu screens and turns OFF your shower
- From the main menu, use the dial to scroll to the “Shower” screen.
- Press the [OK Icon] to enter the shower menu.

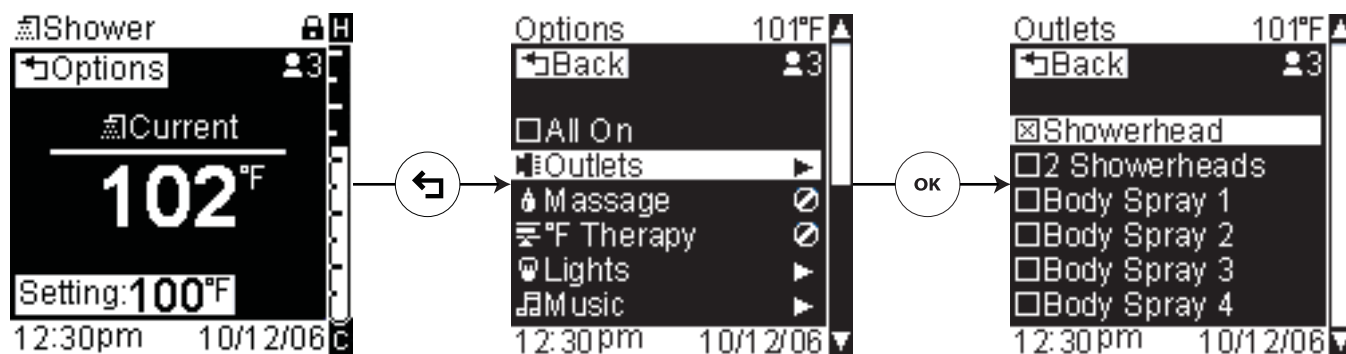

Turn Water Outlets ON or OFF

Turn ON All Outlets

Path: Shower > Temperature > [Back Icon] Options

NOTE: By default, when the shower is first turned ON, after the set temperature is reached, only the primary showerhead will remain on. Using this screen, you can select “All On” to have all water outlets ON.

- From the temperature screen press the [Back Icon].
- Highlight “All On.”
- Press the [OK Icon] to select; this will turn ON all the water outlets.
- Press the [Back Icon] to return to the temperature screen.

Turn ON/OFF Specific Water Outlets

Path: Shower > Temperature > [Back Icon] Options > Outlets

NOTE: The list of water outlets available will vary depending on your specific shower set-up.

 
NOTE: By default, when the shower is first turned ON, after the set temperature is reached, only the primary showerhead will remain on. Using this screen, you can select individual water outlets to turn ON or OFF.

- From the temperature screen press the [Back Icon].
- Using the dial, scroll to “Outlets.”
- Press the [OK Icon] to select. This menu will contain the water outlets available for your chosen configuration.


NOTE: Available water outlets listed will vary dependent on your chosen configuration.

- Scroll to a water outlet such as “Showerhead.”
- Press the [OK Icon] to turn the outlet ON or OFF. All checked items will be ON.
- Once you have made your selections, press the [Back Icon] twice to return to the temperature screen.

Message Not Activated

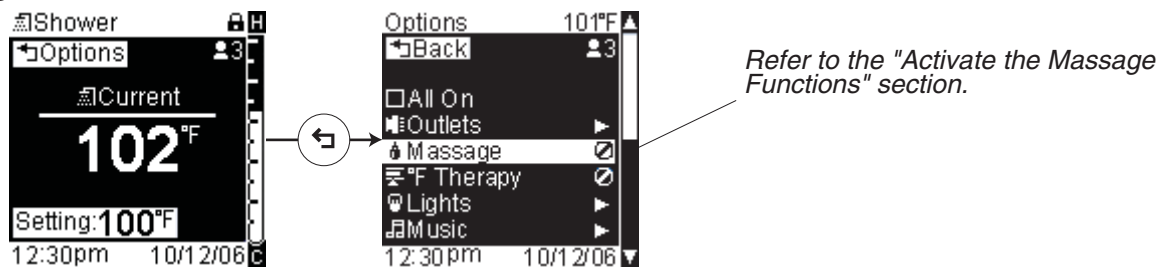

Message Active

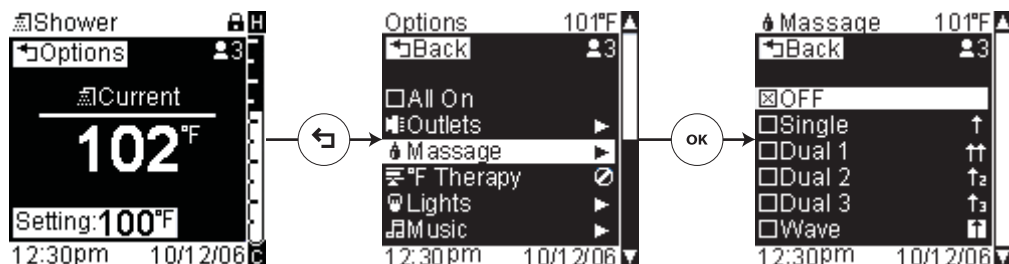 

Choose Message Function

Path: Shower > Temperature > [Back Icon] Options > Message


This function, when activated, causes the water outlets to cycle ON and OFF in the chosen message pattern.

NOTE: If the [No Icon] is present following "Message" instead of an arrow, the message function is not yet activated. Refer to the "Activate the Message Function" in the setting section in this guide to turn on this function.

NOTE: The available message cycling options vary dependent on your chosen configuration. For more information about the available cycling patterns, refer to the section for your particular configuration in the "Configurations" section of this guide.

- To turn ON the message function, from the temperature screen press the [Back Icon].
- Using the dial, scroll to "Message."
- Press the [OK Icon] to select
- Using the dial, scroll to and highlight your desired message.
- Press the [OK Icon] to select and begin message.
- Press the [Back Icon] twice to return to the temperature screen.

Once a message mode is selected, the body sprays/watertiles will automatically turn on and the water outlets will begin to cycle ON and OFF in your chosen message pattern.

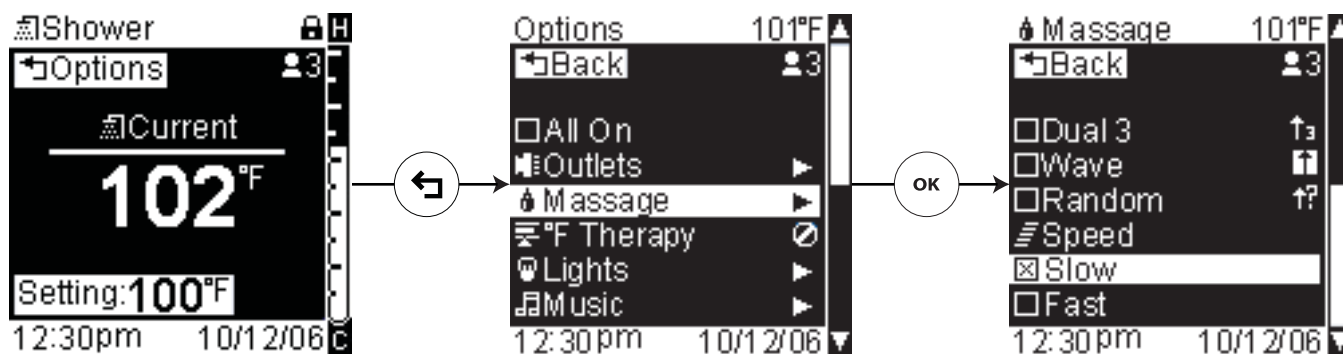


Adjust Cycling Speed

Path: Shower > Temperature > [Back Icon] Options > Massage > Speed > Slow or Fast


Use this function to vary the speed the water outlets cycle during massage.

- To adjust the massage cycling speed, from the temperature screen press the [Back Icon].
- Using the dial, scroll to “Massage.”
- Press the [OK Icon] to select.
- Scroll to the bottom of the menu.
- Use the dial to scroll to and highlight either “Slow” or “Fast.”
- Press the [OK Icon] to set the cycling speed. Your selection will be “checked.”
- Press the [Back Icon] twice to return to the temperature screen.

Temperature Therapy Not Activated

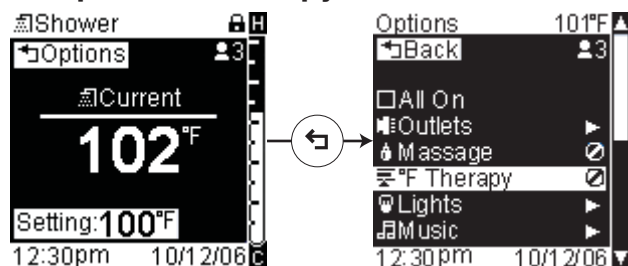

Temperature Therapy Active

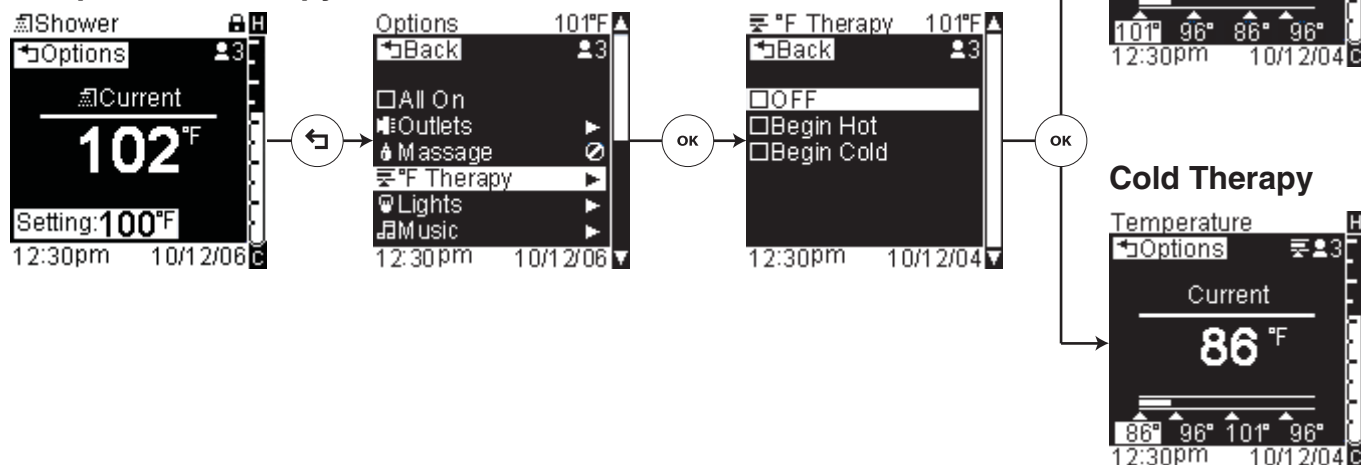 

Temperature Therapy Options

Path: Shower > Temperature > [Back Icon] Options > °F Therapy

NOTE: If the [No Icon] is present following “°F Therapy” instead of an arrow, the temperature therapy function is not yet activated. Refer to the “Activate Temperature Therapy” section to turn on this function.

This function, when activated, causes the water temperature to cycle from hot to cold to hot or cold to hot to cold dependent on your chosen therapy.

NOTE: Temperatures can be customized as desired. For the explanation of the therapies, the default temperatures will be used.

Hot Therapy will start with a water temperature of 101°F (38°C) for 90 seconds, decrease to 96°F (36°C) for 45 seconds, decrease again to 86°F (30°C) for 30 seconds, then step the temperature back up to 96°F (36°C) for 45 seconds before going back to 101°F (38°C). The water temperature will continue to cycle until this function is turned OFF.

Cold Therapy will start with a water temperature of 86°F (30°C) for 30 seconds, increase to 96°F (36°C) for 45 seconds, increase again to 101°F (38°C) for 90 seconds, then step the temperature back down to 96°F (36°C) for 45 seconds before going back to 86°F (30°C). The water temperature will continue to cycle until this function is turned OFF.

 
- To turn ON the temperature therapy function, from the temperature screen press the [Back Icon].
- Using the dial, scroll to “°F Therapy.”
- Press the [OK Icon] to select.
- Using the dial, scroll to either “Begin Hot” for heat therapy, or “Begin Cold” for cold therapy.
- Press the [OK Icon] to select and begin your selected temperature therapy.

Temperature Therapy Options (cont.)


The water temperature will continue to cycle until this function is turned OFF.

To customize the temperatures, refer to the “Changing Temperature Therapy Temperatures” section.

Temperature Therapy Not Activated

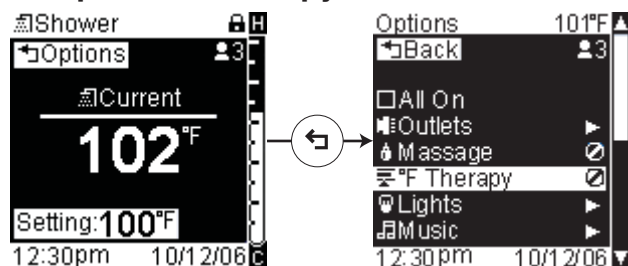

Temperature Therapy Active

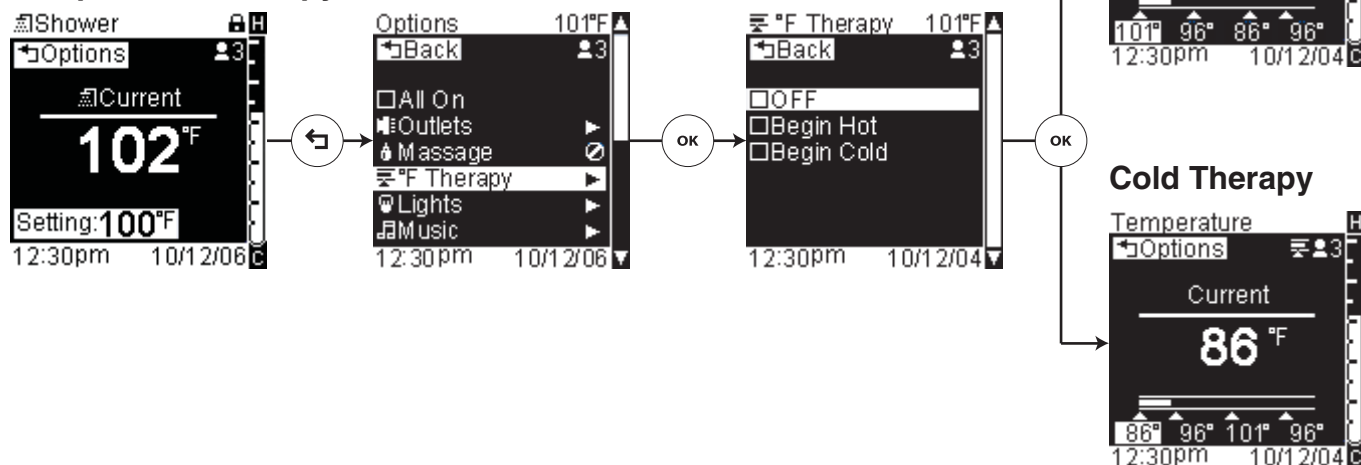

Changing Temperature Therapy Temperatures

Path: Shower > Temperature > [Back Icon] Options > °F Therapy

NOTE: If the [No Icon] is present following “°F Therapy” instead of an arrow, the massage function is not yet activated. Refer to the “Activate Temperature Therapy” section to turn ON this function.

This function, when activated, causes the water temperature to cycle from hot to cold to hot **or** cold to hot to cold dependent on your chosen therapy. High, mid, and low temperatures can be customized.


To customize the temperature therapy temperatures, you must first activate a hot or cold therapy.

- To turn ON the temperature therapy function, from the temperature screen press the [Back Icon].
- Using the dial, scroll to “°F Therapy.”
- Press the [OK Icon] to select.
- Using the dial, scroll to either “Begin Hot” for heat therapy, or “Begin Cold” for cold therapy.
- Press the [OK Icon] to select and begin your selected temperature therapy.

You will see a temperature screen with the various temperature jumps along the bottom. The beginning therapy temperature will be highlighted in the bottom left of the screen.

- Use the dial to adjust the temperature as desired.
- Press the [OK Icon] to set this first temperature and advance to the next temperature.
- Repeat for each temperature setting.

NOTE: When adjusting the temperatures, the second and fourth temperature settings will always be the same; if you adjust one temperature the other will automatically update to the new setting.

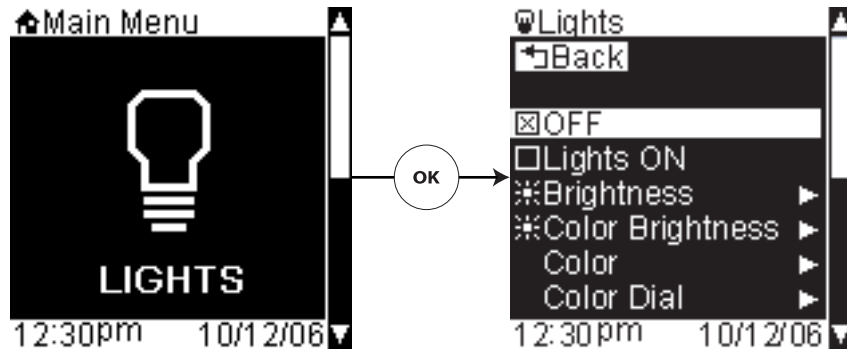

Using Lights


This function controls both the incandescent lighting in your shower as well as the chroma features of your lighted rain panel.

NOTE: If you do not have a chroma light panel connected or if you have incandescent lighting disabled (see “Activate Lights” section) the lighting menu options will not be available.

The light mode options consist of:

- **ON/OFF** – turns incandescent or chroma lighting ON or OFF
- **Brightness** – adjusts the brightness of your incandescent lighting
- **Color Brightness** – adjusts the brightness of your chroma lighting
- **Choose Color** – sets the chroma lighting to display the color of your choosing
- **Color Dial** – sets the chroma lighting to display a custom color of your choosing
- **Effects** – sets in motion the lighting effects of your chroma lighting
- **Save As** – saves current settings to a user preset (refer to the “Save As” section)
- **Main Menu** – returns to the main menu screens and turns OFF your shower (refer to the “Main Menu” section)

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to enter the Lights options menu.

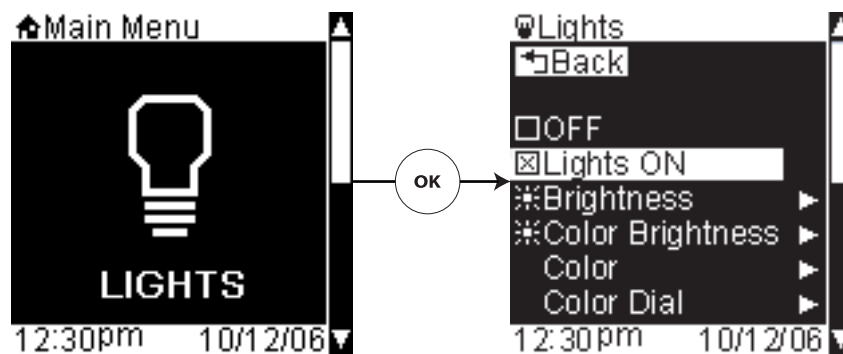

Lights ON/OFF

Path: Lights > Lights ON

Alternate Path: Shower > [Back Icon] Options > Lights > Lights ON

To turn on your lights:

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to enter the Lights menu.
- Using the dial, scroll to “Lights ON.”
- Press the [OK Icon] to select and turn ON the lights.



Incandescent Brightness

Path: Lights > Brightness

Alternate Path: Shower > [Back Icon] Options > Lights > Brightness

This feature allows you to adjust and set the brightness of your incandescent lighting.

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to select.
- Scroll to “Brightness.”
- Press the [OK Icon] to select.
- Once the brightness is set, press the [Back Icon] to return to the lights options menu.



Chroma Brightness

Path: Lights > Color Brightness

Alternate Path: Shower > [Back Icon] Options > Lights > Color Brightness

This feature allows you to adjust and set the brightness of your chroma lighting.

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to select.
- Scroll to “Color Brightness.”
- Press the [OK Icon] to select.
- Turn the dial counterclockwise to dim the lights and clockwise to brighten.
- Once the brightness is set, press the [Back Icon] to return to the lights options menu.



Choose Color

Path: Lights > Color

Alternate Path: Shower > [Back Icon] Options > Lights > Color

The chroma lighting can be set to display the color of your choosing.

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to select.
- Scroll to “Colors.”
- Press the [OK Icon] to select.
- Using the dial, scroll to your desired color.
- Press the [OK Icon] to select; the light will change to your selected color.
- Once the color is set as desired, press the [Back Icon] to return to the lights options menu.



Choose Custom Color

Path: Lights > Color Dial

Alternate Path: Shower > [Back Icon] Options > Lights > Color Dial

The chroma lighting can be set to display a custom color of your choosing.

- From the main menu, use the dial to scroll to the "Lights" screen.
- Press the [OK Icon] to select.
- Scroll to "Color Dial."
- Press the [OK Icon] to select.
- Use the dial to adjust the color up or down by 5° increments.
- Once the color is set as desired, press the [Back Icon] to set the custom color under the "Color Dial" selection in the "Colors" menu and to return to the Light Options screen.



Lighting Effects

Path: Lights > Effects

Alternate Path: Shower > [Back Icon] Options > Lights > Effects

 
The chroma light comes with multiple lighting effects, such as Sunrise, Sunset, and Water Reflection.

- From the main menu, use the dial to scroll to the “Lights” screen.
- Press the [OK Icon] to select.
- Scroll to “Effects.”
- Press the [OK Icon] to select.
- Using the dial, scroll to your desired effect.
- Press the [OK Icon] to select and begin the chroma lighting effect.
- Press the [Back Icon] twice to return to the temperature screen.

Save Lights Settings

Path: Lights > Save As

- Refer to the “Save As” section.

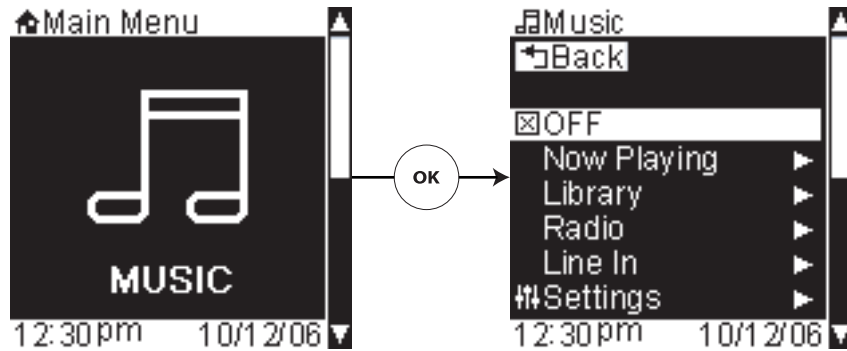

Using Music

IMPORTANT! To stream audio from your home computer to your shower, you must first configure the music server on your computer. Refer to the "Music Server Set-up – Getting Started" section for information on configuring your music server.

IMPORTANT! Music options will not be available unless you have agreed to the Roku terms of agreement and have also selected your region. If this was not done during the initial set-up, refer to the "Roku Agreement" section.

 
A high-speed internet connection is recommended for best performance.

From the music options menu, you can access and play your music files in the "Library" and preconfigured internet radio stations under "Radio." Additional audio devices, such as an MP3 player, can be connected via the Line In jack allowing your interface to control the volume.

The music mode options consist of: *(options listed vary dependant on your system set-up)*

- **OFF** – turns OFF your music
- **Library** – links to your configured music servers
- **Radio** – links to your configured internet radio stations
- **Line In** – allows you to hook up your own audio device to the system
- **Settings** – controls the music settings for your system (refer to the "Music Settings" section)
- **Save As** – saves current settings to a user preset (refer to the "Save As" section)
- **Main Menu** – returns to the main menu screens and turns OFF your shower (refer to the "Main Menu" section)

- From the main menu, use the dial to scroll to the "Music" screen.
- Press the [OK Icon] to enter the Music options menu.

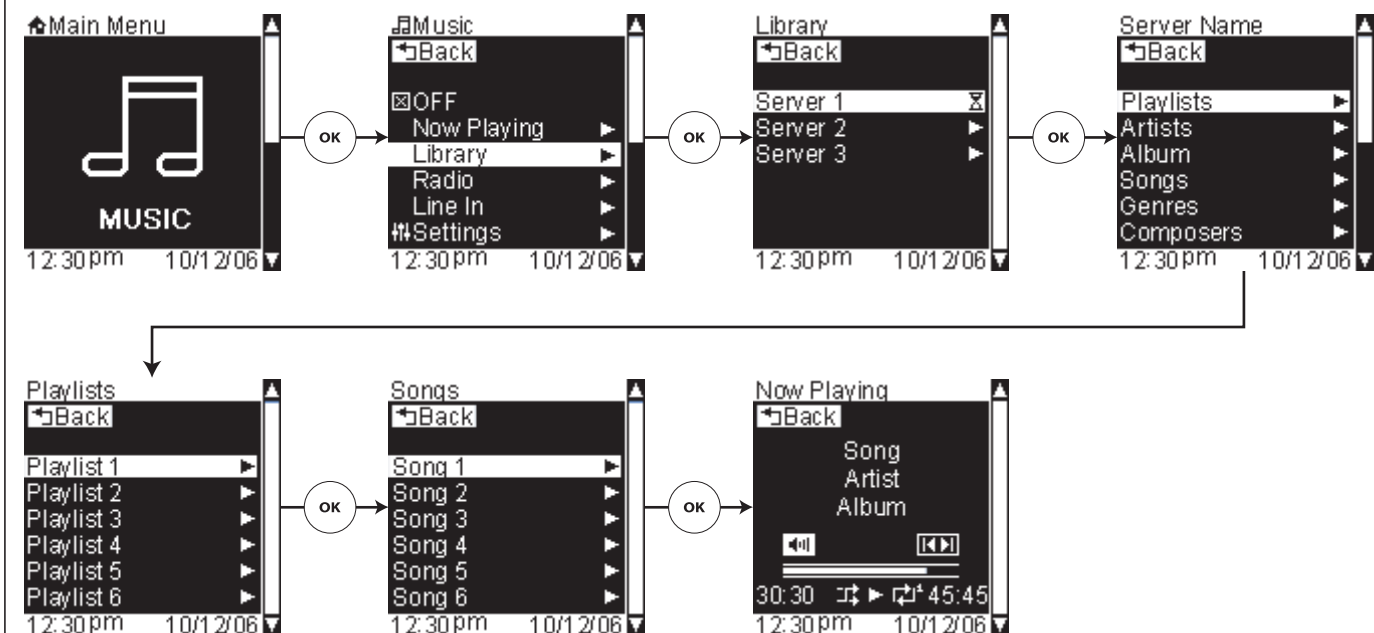

Your Music Library

Path: Music > Library

Alternate Path: Shower > [Back Icon] Options > Music > Library

This function links to your configured music servers to play your music files.

- From the main menu, use the dial to scroll to the “Music” screen.
- Press the [OK Icon] to enter the Music menu.
- To listen to your music files, scroll to “Library.”
- Press the [OK Icon] to select.
- Scroll to and select your music server.

Dependant upon your music server, your music will be organized by playlist, artist, album, songs, or genre. Navigate through the menus to a song list.

- Use the dial to scroll to and highlight a song.
- Press the [OK Icon] to begin playing the selected song.


In the “Now Playing” screen, your song will be displayed with song, artist, and album (if the information is available).

- When the volume icon is highlighted, use the dial to adjust the volume.

To skip forward or backward in your playlist:

- Press and hold the [OK Icon] for 3 seconds to switch the highlight to the skip icon.
- Use the dial to skip forward or backward in your playlist.

After 10 seconds the dial will revert back to controlling volume.

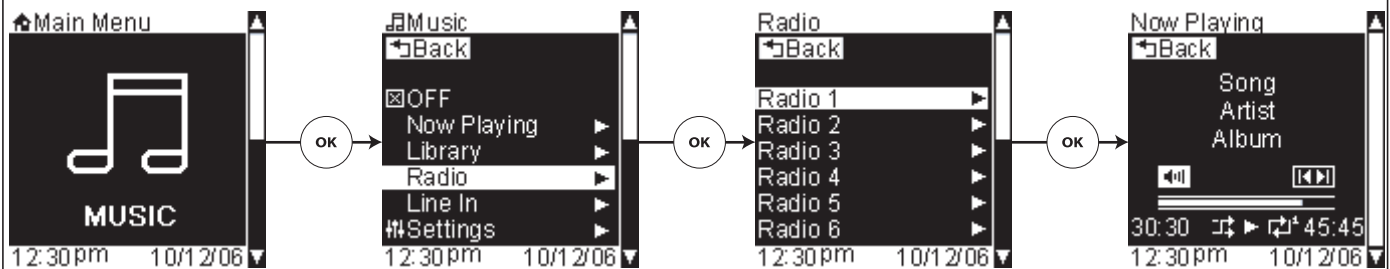

Internet Radio

Path: Music > Radio

Alternate Path: Shower > [Back Icon] Options > Music > Radio


This feature links to and plays your configured Internet radio stations.

Your computer does not need to be on to access the built-in intranet radio stations listed under "Radio." You need only to have an active Internet connection to your home network.

To add intranet radio stations to your playlist, refer to the "Adding Internet Stations" section.

To begin playing an Internet radio station:

- From the main menu, use the dial to scroll to the "Music" screen.
- Press the [OK Icon] to enter the Music menu.
- To access an Internet radio station from the music options screen, scroll to "Radio."
- Press the [OK Icon] to select.
- Using the dial, scroll through the available stations.
- Press the [OK Icon] to begin streaming the radio station. The screen will now display what is "Now Playing."
- Use the dial to adjust the volume.

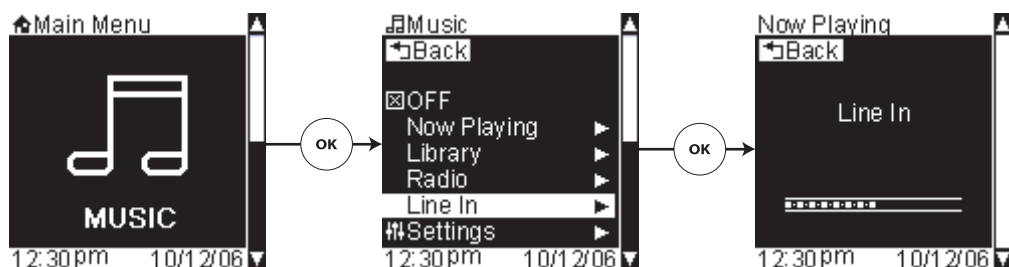


Additional Audio Devices

IMPORTANT! For best sound quality, adjust the volume on your connected device to a comfortable listening volume prior to connecting; allow the volume to be adjusted via the interface, not the audio device.

This feature allows you to play music from another audio device, such as an MP3 player, plug the device in via the Line In jack.

- From the main menu, use the dial to scroll to the “Music” screen.
- Press the [OK Icon] to enter the Music menu.
- From the music options screen, scroll to “Line In.”
- Press the [OK Icon] to select.
- Press play on your audio device. The screen will now display “Line-In.”
- Use the dial to adjust the volume.

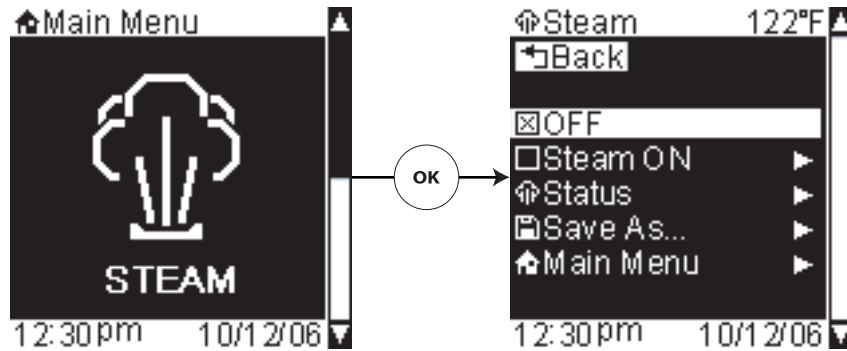

Using Steam

Your properly equipped Kohler steam generator can also be controlled via your interface.

Your steam system is set to allow for 600 minutes of usage before a cleaning cycle is required. Refer to the “Power Clean” section for more information.

The steam mode options consist of:

- **OFF** – turns your steam OFF
- **Steam On** – turns ON steam
- **Save As** – saves current settings to a user preset (refer to the “Save As” section)
- **Main Menu** – returns to the main menu screens and turns OFF your shower (refer to the “Main Menu” section)

- From the main menu, use the dial to scroll to the “Steam” screen.
- Press the [OK Icon] to enter the Steam options menu.



Steam On

Path: Steam > Steam On

Alternate Path: Shower > Steam > Steam On

- From the main menu, use the dial to scroll to the “Steam” screen.
- Press the [OK Icon] to enter the Steam options menu.
- Using the dial, scroll to and select “Steam On.” This will turn your steam ON and bring you to the steam status screen.

The temperature in the bottom center of the screen will now be highlighted.

- Use the dial to adjust the steam temperature.
- Press the [OK Icon] to set the temperature.

Now the timer for the steam is highlighted in the bottom right of the screen.

- Using the dial, you can increase the duration for the steam up to 10 additional minutes.
- Press the [OK Icon] to set the timer. The temperature will be highlighted again.

NOTE: The maximum allowable setting for the timer is 55 minutes.

- If you would like to increase the steam timer, press the [OK Icon] again and repeat until the desired amount of time is displayed.

Save Steam Settings

Path: Steam > Save As

- Refer to the “Save As” section.


Using User Presets

User presets allow you to quickly access your saved personal settings for shower, lighting, music and/or steam.

User presets can be saved at any time while showering, or set up using the settings menu prior to showering.

Using User Presets (cont.)

- To access previously set user information, press the [123 User Icon] once for "User 1," twice for "User 2," and three times for "User 3." You would press the [456 User Icon] once for "User 4," twice for "User 5," and three times for "User 6."
- **An alternate method for accessing user presets:** Press the [123 User Icon] or [456 User Icon], scroll to the desired user and press the [OK Icon] to select.
- If you need help customizing your settings, refer to the Shower, Lights, Music, and Steam sections.
- For saving user presets, refer to the "Save As" section.

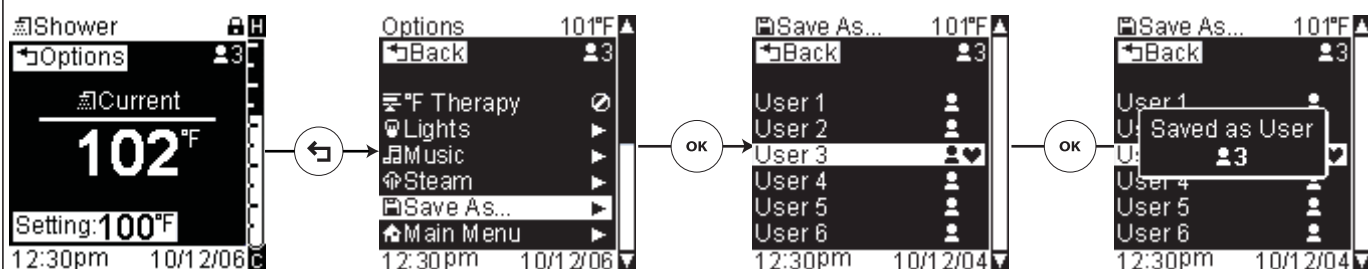

Save As

Path: Shower > Temperature > [Back Icon] Options > Save As...

Alternate Paths:

Lights > Save As

Music > Save As

 
Steam > Save As

User presets save your personal settings for showering, lights, music, and steam.

User presets can be saved at any time.

If you need help customizing your settings, refer to the: "Shower Settings," "Light Settings," "Music Settings," and "Steam Settings" sections.

- ❑ Using the dial, scroll to "Save As..." from the shower, lights, music, or steam options screens (see paths above).
- ❑ Press the [OK Icon] to select.
- ❑ Scroll to a user number. The current active user will be denoted by a heart symbol.
- ❑ Press the [OK Icon] to save your settings to the highlighted user.
- ❑ Once saved, a confirmation screen will confirm your saved user profile.

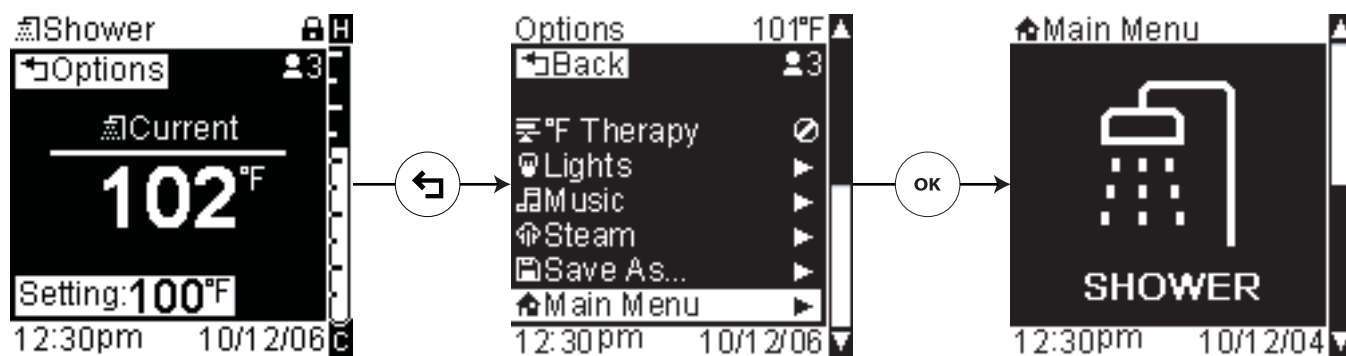

Main Menu

Path: Shower > Temperature > [Back Icon] Options > Main Menu

Alternate Paths:

Lights > Main Menu

Shower > [Back Icon] Options > Lights > Main


Music > Main Menu

Shower > [Back Icon] Options > Music > Main Menu

Steam > Main Menu

Shower > [Back Icon] Options > Steam > Main Menu

- Using the dial, scroll to “Main Menu” from the shower, lights, music, or steam options screens (see paths above).
- Press the [OK Icon] to select and return to the main menu and turn OFF your shower. Lights, music, and steam, will remain ON if currently in use.

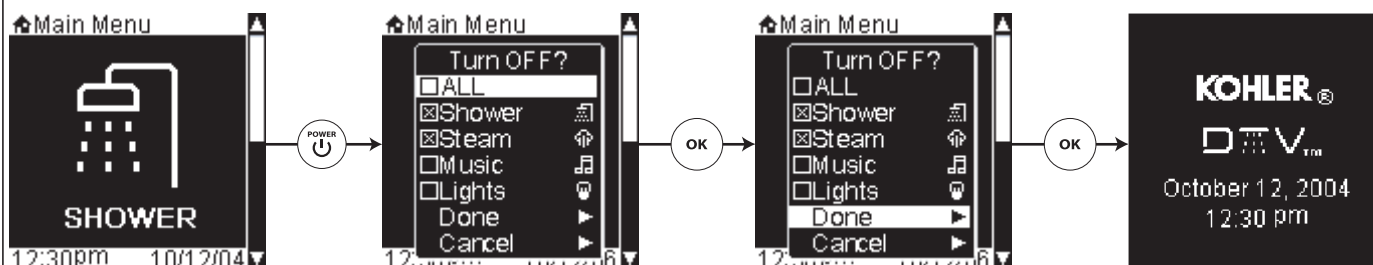

Turn OFF Individual Devices

Path: [Power Icon]

Your system can be set to turn OFF all devices and the shower when the [Power Icon] is pressed or allow you the option of turning OFF individual devices while leaving others, such as the shower, ON.

Activate the Ask Function

- To allow the power down of individual devices, refer to the “Power OFF” section and activate the “Ask” function.


If the “Ask” Function is Activated – Turn OFF Individual Devices:

- Press the [Power Icon]. A pop-up screen will appear showing all features that are currently ON.
- Scroll through and highlight the item(s) you want to turn OFF.
- Press the [OK Icon] to “check” that item.
- Once all items you want to turn OFF are “checked,” scroll to “Done.”
- Press the [OK Icon] and all selected items will turn OFF.


If the “Ask” Function is Activated – Turn OFF All Devices:

- Press the [Power Icon]. A pop-up screen will appear showing all features that are currently ON.
- Press the [Power Icon] again to turn OFF all devices.


Frontage

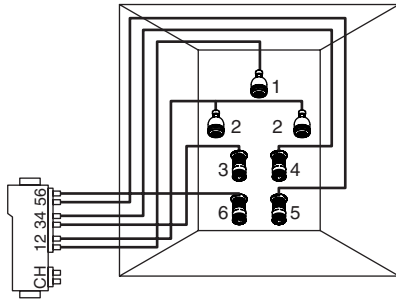


Envelop

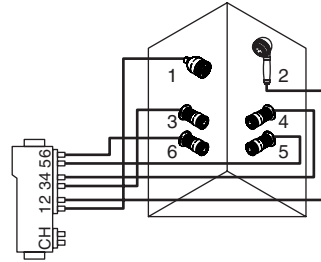 


Unwind

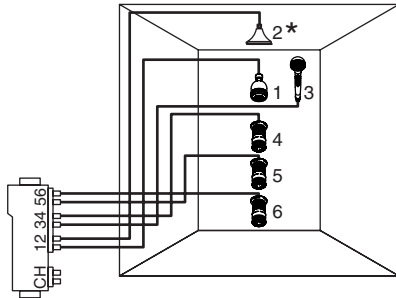 




Linear

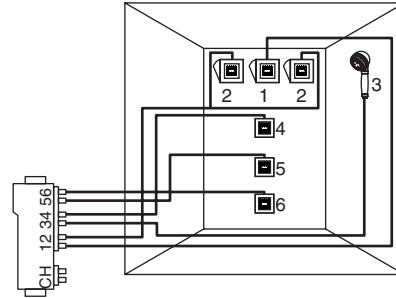 

Downpour

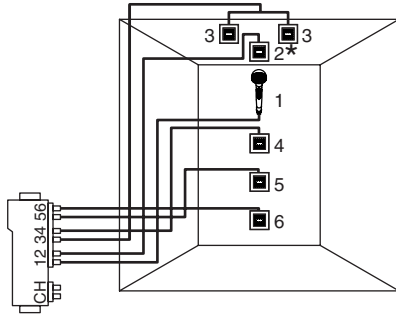 

Surround

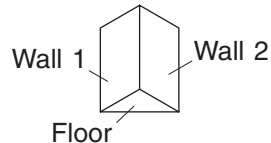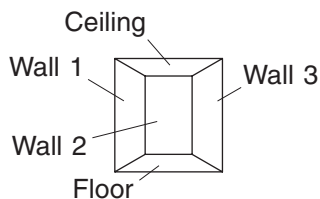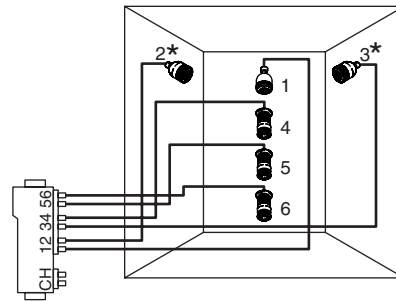   

* If body sprays, watertiles or watertile showerheads are present in these outlets, they will not cycle.

 
Configurations

NOTE: Preprogrammed component configurations are shown; other options are possible. Use of configurations other than the preprogrammed options will LIMIT the preprogrammed massage functions.


NOTE: "Random" is a massage option for all configurations. This option will cycle through all the massage options available for your configuration, running each pattern for 30 seconds.

Water Outlet Configuration

- 1: Showerhead
- 2: Showerheads
- 3: Body Spray 1
- 4: Body Spray 2
- 5: Body Spray 3
- 6: Body Spray 4

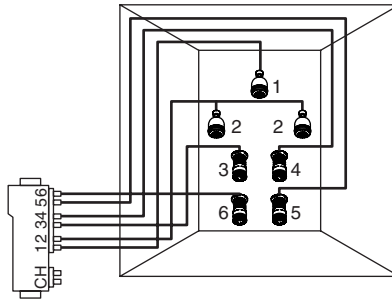

Massage Cycling Patterns

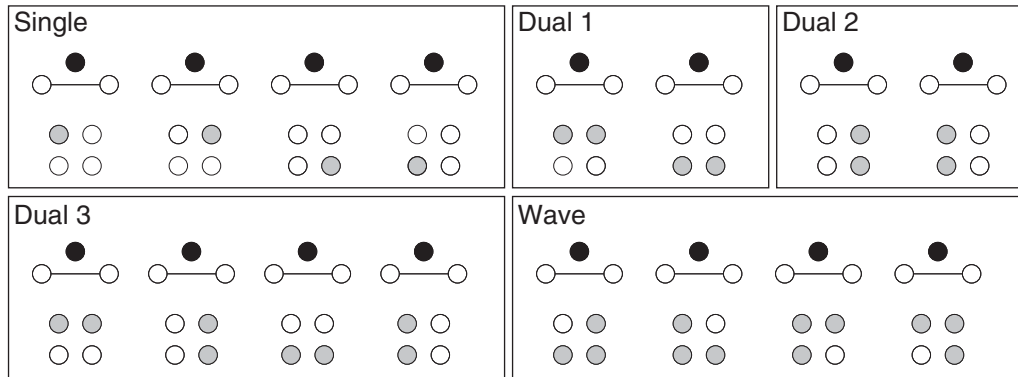 

● = Constant on
 ● = On while cycling

Frontage

Water outlets used = 7

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **15.4 gpm (58.3 lpm)**

 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **17.5 gpm (66.2 lpm)**

Available Massage Options


- Single
- Dual 1
- Dual 2
- Dual 3
- Wave
- Random

Water Outlet Configuration

- 1: Showerhead
- 2: Handshower
- 3: Body Spray 1
- 4: Body Spray 2
- 5: Body Spray 3
- 6: Body Spray 4

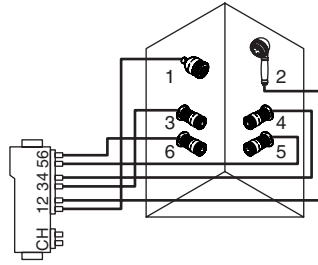

Massage Cycling Patterns

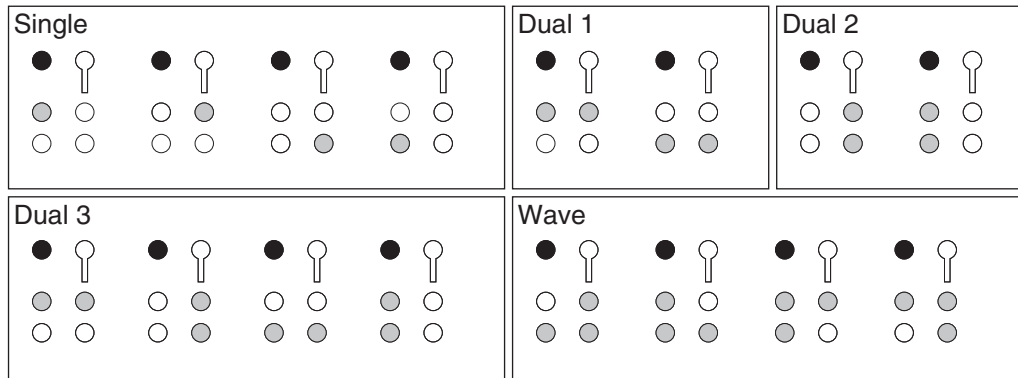 

● = Constant on
 ● = On while cycling

Envelop

Water outlets used = 6

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **13.2 gpm (50 lpm)**

 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **15 gpm (56.8 lpm)**

Available Massage Options


- Single
- Dual 1
- Dual 2
- Dual 3
- Wave
- Random

Water Outlet Configuration

- 1: Showerhead
- 2: Overhead
- 3: Handshower
- 4: Body Spray 1
- 5: Body Spray 2
- 6: Body Spray 3

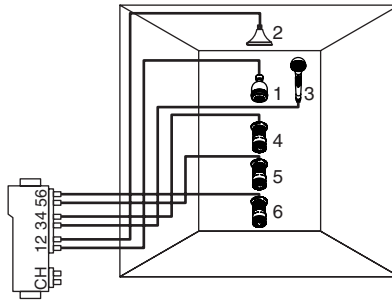

Massage Cycling Patterns

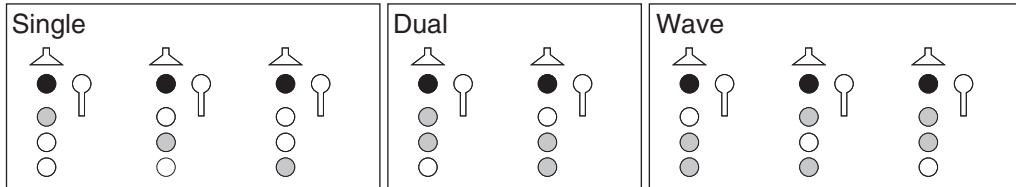 

- = Constant on
- = On while cycling

Unwind

Water outlets used = 6

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **13.2 gpm (50 lpm)**

 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **15 gpm (56.8 lpm)**

Available Massage Options


- Single
- Dual
- Wave
- Random

Water Outlet Configuration

- 1: WaterTile S.H.
- 2: 2 WaterTile S.H.
- 3: Handshower
- 4: WaterTile 1
- 5: WaterTile 2
- 6: WaterTile 3

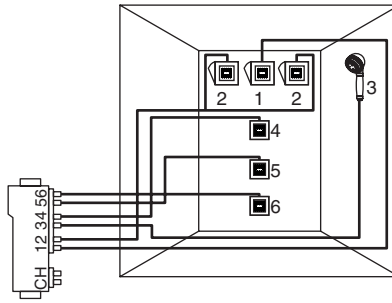

Massage Cycling Patterns

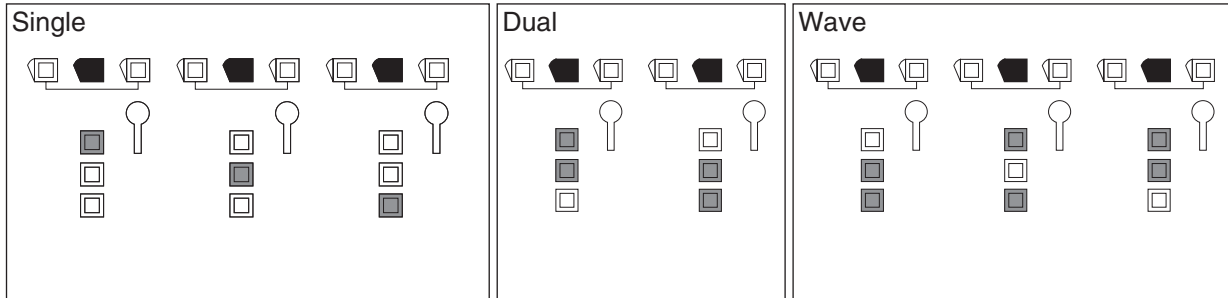 

- = Constant on
- = On while cycling

Linear

Water outlets used = 7

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **15.4 gpm (58.3 lpm)**

 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **17.5 gpm (66.2 lpm)**

Available Massage Options


- Single
- Dual
- Wave
- Random

Water Outlet Configuration

- 1: Handshower
- 2: WaterTile
- 3: 2 WaterTiles
- 4: WaterTile 1
- 5: WaterTile 2
- 6: WaterTile 3

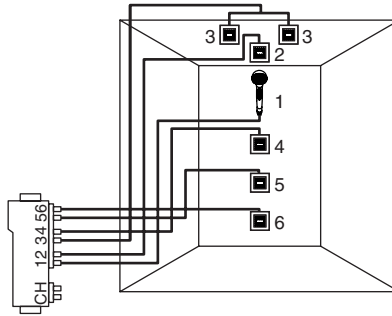

Massage Cycling Patterns

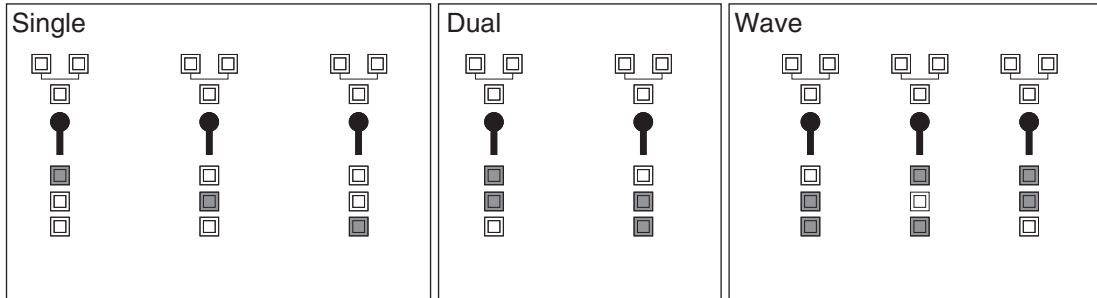 

- = Constant on
- = On while cycling

Downpour

Water outlets used = 7

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **15.4 gpm (58.3 lpm)**

 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **17.5 gpm (66.2 lpm)**

Available Massage Options


- Single
- Dual
- Wave
- Random

Water Outlet Configuration

- 1: Showerhead 1
- 2: Showerhead 2
- 3: Showerhead 3
- 4: Body Spray 1
- 5: Body Spray 2
- 6: Body Spray 3

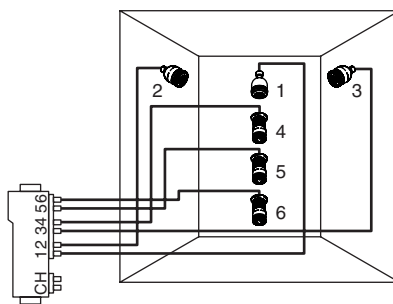

Massage Cycling Patterns

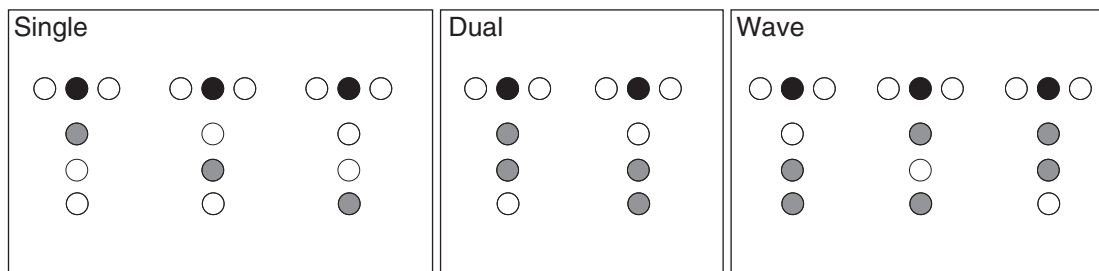 

● = Constant on
 ● = On while cycling

Surround

Water outlets used = 6

Total gpm (lpm) with a flow rate of 2.2 gpm (8.3 lpm) per outlet = **13.2 gpm (50 lpm)**

 
 
 
Maximum total gpm (lpm) with a flow rate of 2.5 gpm (9.5 lpm) per outlet = **15 gpm (56.8 lpm)**

Available Massage Options


- Single
- Dual
- Wave
- Random

Water Outlet Configuration

- 1: Outlet 1 (*Primary Showerhead*)
- 2: Outlet 2
- 3: Outlet 3
- 4: Outlet 4
- 5: Outlet 5
- 6: Outlet 6

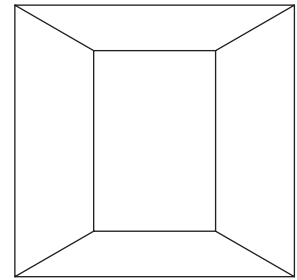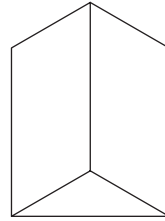

Massage Cycling Patterns

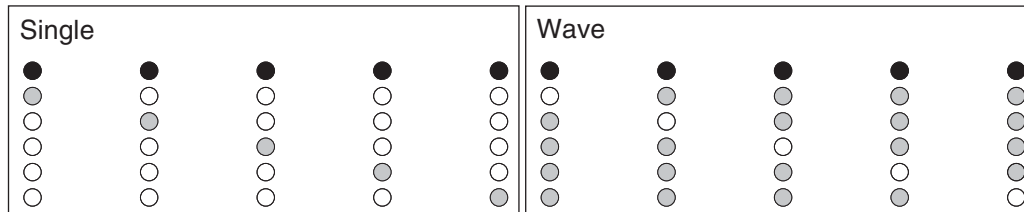 

NOTE: Primary outlets and any outlets designated as handshowers will not be included in the cycling pattern. For installations that include both body sprays and watertiles, the outlets designated as watertiles will not cycle.

- = Constant on
- = On while cycling

Custom

General Guidelines for Custom Configurations:

Outlet 1 is always recommended to be the primary showerhead. Custom mode will allow the user to select a different port as the primary, but it is not recommended.

When cycling during massage functions, the body sprays/watertiles will cycle from Outlet 1 to Outlet 6, regardless of which port is designated as the primary outlet.

The installer must determine the water outlet cycling order for the "Single" massage function and plumb each water outlet accordingly.


Use the above diagrams to draw in the components for your custom shower.

Draw lines from the valve to each component as your shower is plumbed.

NOTE: Only water outlets designated as body sprays or watertiles will be allowed to cycle. Any outlets with 2 fittings, such as 2 Body Sprays or 2 WaterTiles will not cycle. Also any instance where watertiles and body sprays are used in the same configuration, only the body sprays will cycle.

Available Massage Options

 - Single
- Wave
- Random

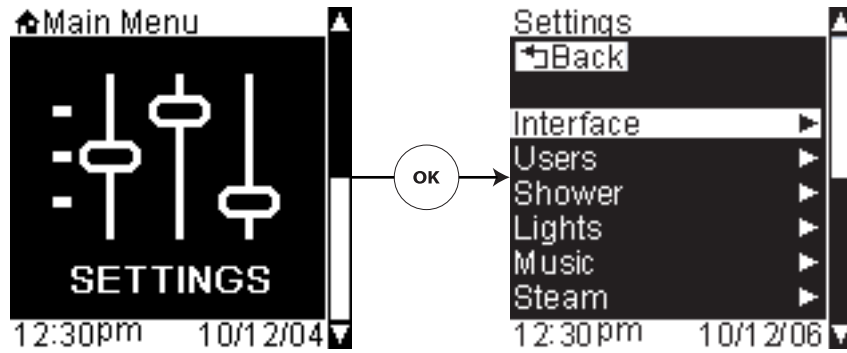


The Settings Menus

Path: Settings

The settings menu is broken down into seven categories listed below allowing you to quickly and easily customize your showering experience.

- Interface
- Users
- Shower
- Lights
- Music
- Steam
- System

- From the main menu, use the dial to scroll to the “Settings” screen.
- Press the [OK Icon] to enter the settings menu.

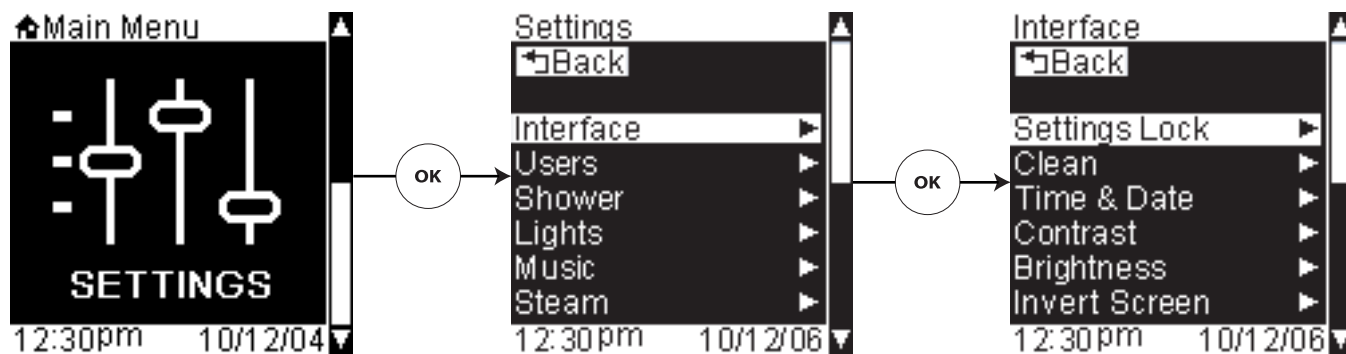

Interface Settings


Path: Settings > Interface

The interface settings menu consists of:

- **Settings Lock** – locks the settings menus
- **Clean** – locks the “keys” for cleaning
- **Time and Date** – sets and displays the date and time
- **Contrast** – adjusts the screen contrast
- **Brightness** – adjusts the screen brightness
- **Invert Screen** – inverts the screen colors
- **Beep** – adjusts volume of interface beeps
- **Auto Dim** – sets screen to dim after 30 seconds of inactivity
- **Auto Return** – sets the screen to return to the screen of highest precedence after 30 seconds of inactivity
- **Auto Lock** – locks the auxiliary interface once the primary interface is used
- **Language** – selects the interface display language
- **Units** – sets the temperature unit
- **Power OFF** – This function allows you to set the functionality of the [Power Icon]

- To access the Interface Settings options, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Scroll to and select “Interface.”

Settings Lock

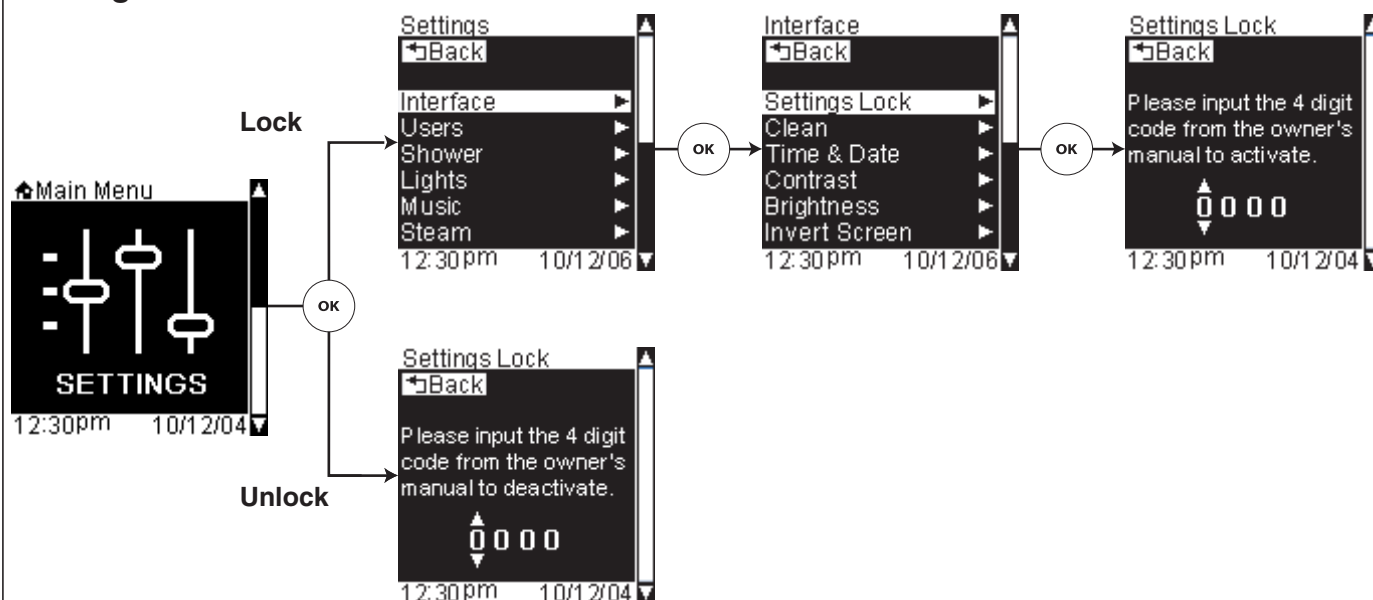

Settings Lock

Path: Settings > Interface >

This function locks all the settings menus to prevent saving over current settings. When entering the settings menu you can temporarily unlock the menu by providing the four-digit code when prompted. Once unlocked, the system will allow you to change and save settings until you exit the settings menu.

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Interface."
- Press the [OK Icon] to select.
- Scroll to "Settings Lock."
- Press the [OK Icon] to select.

Activate

To activate the settings lock function you need to input the 4 digit code **1012**.

- Use the dial to set the first number.
- Press the [OK Icon] to set that number and proceed to the next number.
- Repeat for each additional number until the code is entered.

Deactivate

 
To temporarily deactivate the settings lock function you need to input the 4 digit code **1012**.

- Use the dial to set the first number.
- Press the [OK Icon] to set that number and proceed to the next number.
- Repeat for each additional number until the code is entered.

Settings Lock (cont.)

To deactivate the settings lock function you need to input the 4 digit code **1012**.

- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Settings Lock.”
- Press the [OK Icon] to select.
- Reenter the four-digit code.

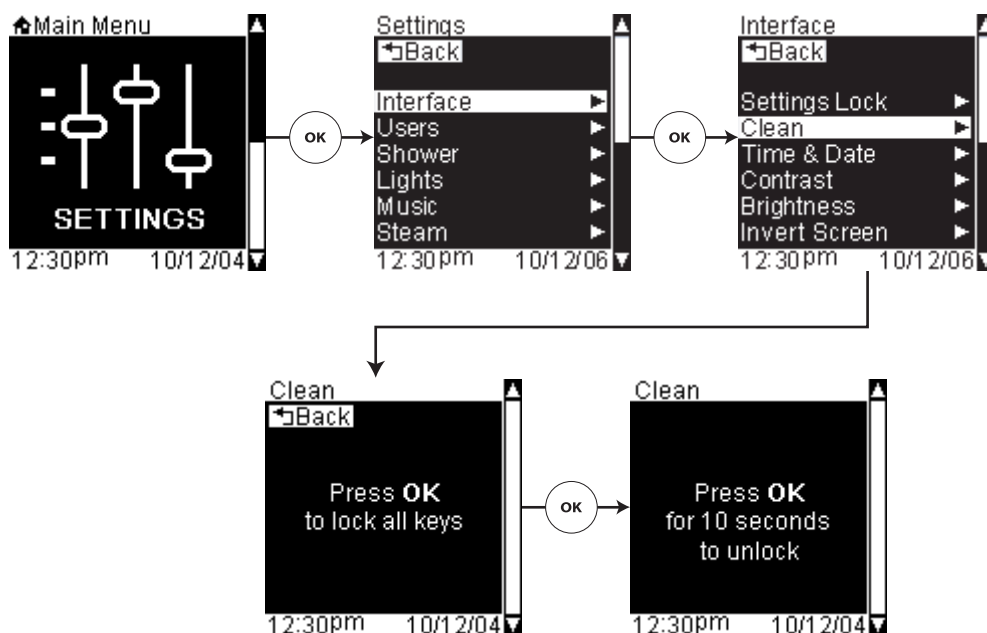


Clean

Path: Settings > Interface > Clean

This function allows you to lock the “keys” or icons of the interface for cleaning.

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Clean.”
- Press the [OK Icon] to select and lock the “keys.”
- Press and hold the [OK Icon] for 10 seconds to unlock. After five minutes the “keys” will automatically unlock.

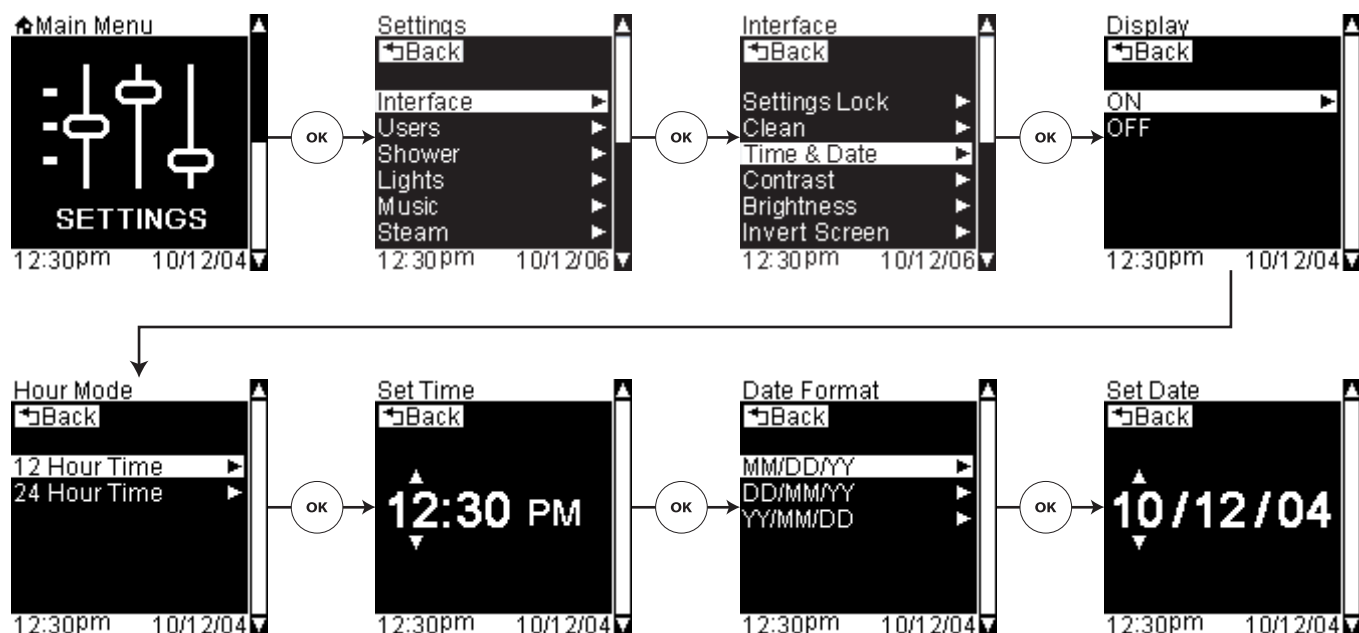

Time and Date

Path: Settings > Interface > Time & Date

- To change the time and date settings, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Time and Date.”
- Press the [OK Icon] to select.

Turn the display OFF

Path: Settings > Interface > Time and Date > OFF

You can choose to have the date and time display ON or OFF. The default setting is ON.

- Use the dial to choose “ON” or “OFF.”
- Press the [OK Icon] to select.

If you choose OFF, the date and time will no longer be displayed and the screen will default back to the settings menu.

Choose 12- or 24-hour time

Path: Settings > Time and Date > ON > 12-hour time/24-hour time

If you selected to have the display ON, continue to select either 12- or 24-hour time.

- Use the dial to choose “12-hour time” or “24-hour time.”
- Press the [OK Icon] to select.

Set the Time

Time and Date (cont.)

NOTE: For 12-hour time, the hour setting controls AM or PM.

 
- After you select either 12- or 24-hour time, rotate the dial to change the hour.
- Press the [OK Icon] to set the hour.
- Repeat for the minute setting.

Once the time is set, the date format screen will appear.

Set the Date

Rotate the dial to select your preferred date format. For this example MM/DD/YY is shown:


- MM/DD/YY: Month / Day / Year,
- DD/MM/YY: Day / Month / Year, or
- YY/MM/DD: Year / Month / Day.
- Press the [OK Icon] to select.
- Once your format is selected, rotate the dial to select the month.
- Press the [OK Icon] to set the month and proceed to the next number.
- Repeat to set the day and year.
- Once the year is set, press the [OK Icon] to set and return to the Interface Settings screen.

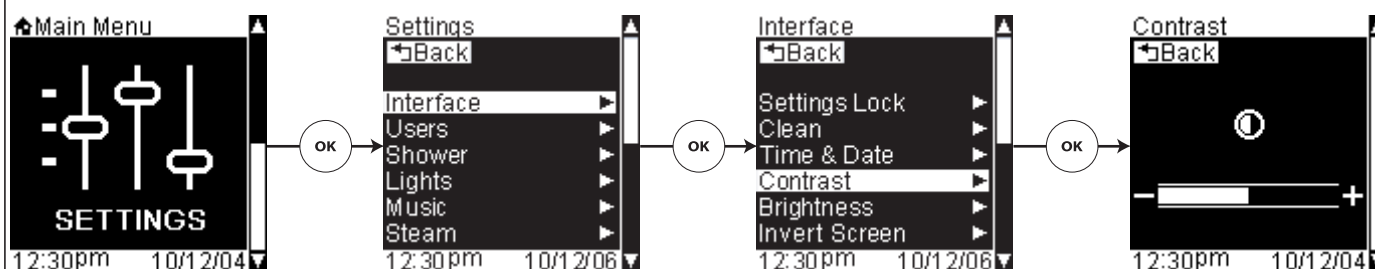

Contrast

Path: Settings > Interface > Contrast


- To adjust the screen contrast, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Contrast.”
- Press the [OK Icon] to select.
- Use the dial to adjust the screen contrast to the desired level.
- Press the [Back Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

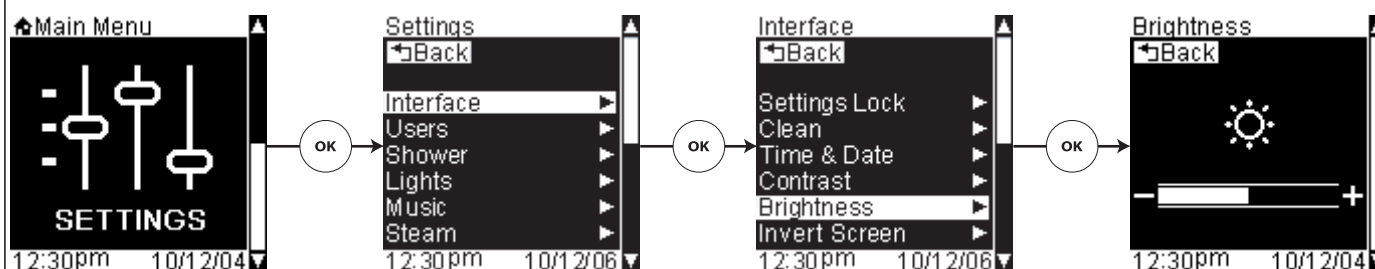

Brightness

Path: Settings > Interface > Brightness

 - To adjust the screen brightness, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Brightness.”
- Press the [OK Icon] to select.
- Use the dial to adjust the screen brightness to the desired level.
- Press the [Back Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

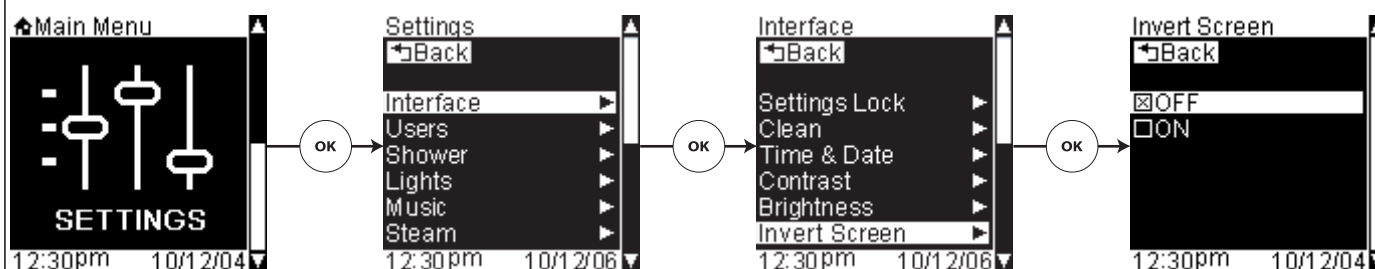

Invert Screen


Path: Settings > Interface > Invert Screen > OFF/ON

Invert Screen is defaulted to “OFF.”

When “OFF” is selected, the screen is set to a blue background with white text and icons.

When the Invert Screen is “ON” the screen is set to a white background with blue text and icons.

- To turn “Invert Screen” ON or OFF, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Invert Screen.”
- Press the [OK Icon] to select.
- Scroll to and highlight “ON” or “OFF.”
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

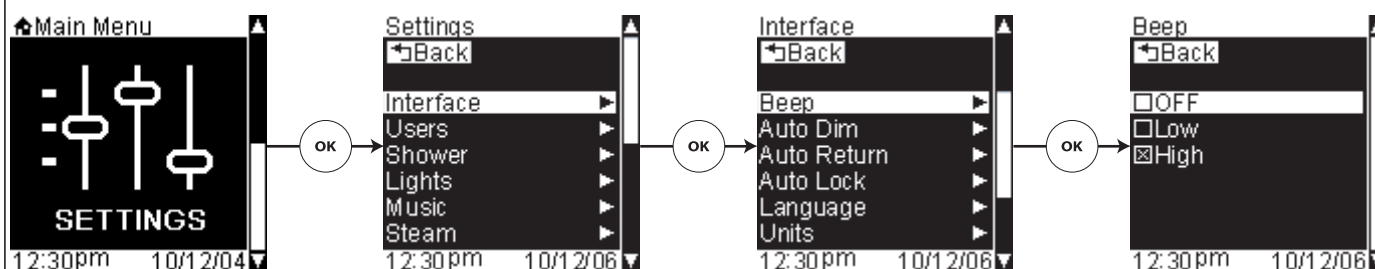


Beep

Path: Settings > Interface > Beep > OFF, Low, or High

The beep volume is defaulted to “High.”

Use this function to turn off or adjust the volume of the interface beeps.

- To change the beep volume, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Beep.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “OFF,” “Low,” or “High.”
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

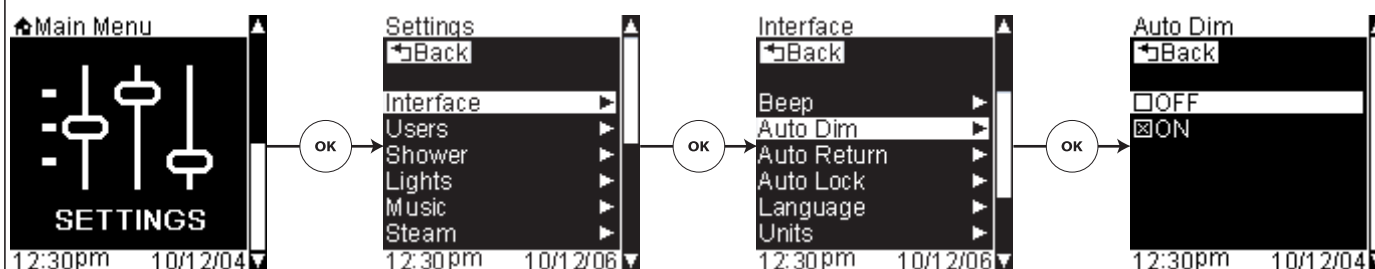


Auto Dim

Path: Settings > Interface > Auto Dim > ON or OFF

The factory default is “ON.”

When activated, this feature dims the screen and icon lights after 30 seconds of inactivity.

- To activate this function, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Auto Dim.”
- Press the [OK Icon] to select.
- Scroll to “ON” to enable or “OFF” to disable this function.
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

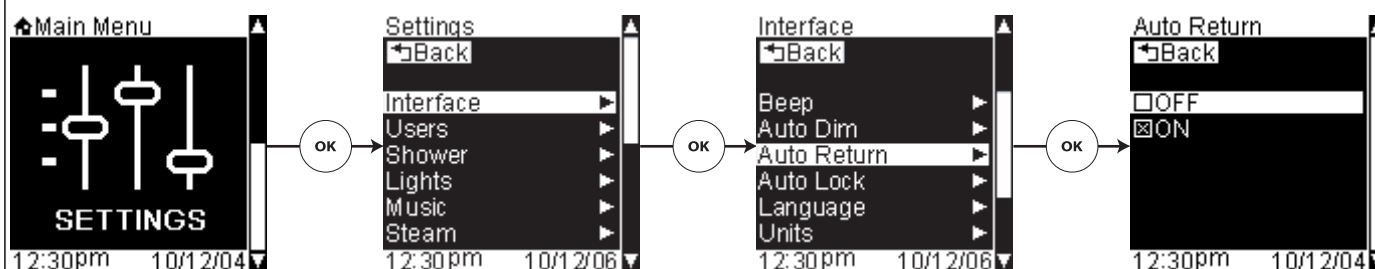

Auto Return

 
Path: Settings > Interface > Auto Return > ON or OFF

The factory default is "ON."

If within the Shower, Lights, Music, or Steam Options Screens: When activated, based on the order of precedence, the system will return to the screen of the highest active system after 30 seconds of inactivity. Order of system precedence is: Shower, Steam, Music, then Lights. Return screen in order of precedence is: Shower Temperature, Steam Status, Music Now Playing, then Lights Options.

If within the Setting Screens: When activated, the screen will automatically return to the logo screen after one minute of inactivity.

- To activate this function, from the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Interface."
- Press the [OK Icon] to select.
- Scroll to "Auto Return."
- Press the [OK Icon] to select.
- Scroll to "ON" to enable or "OFF" to disable this function.
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

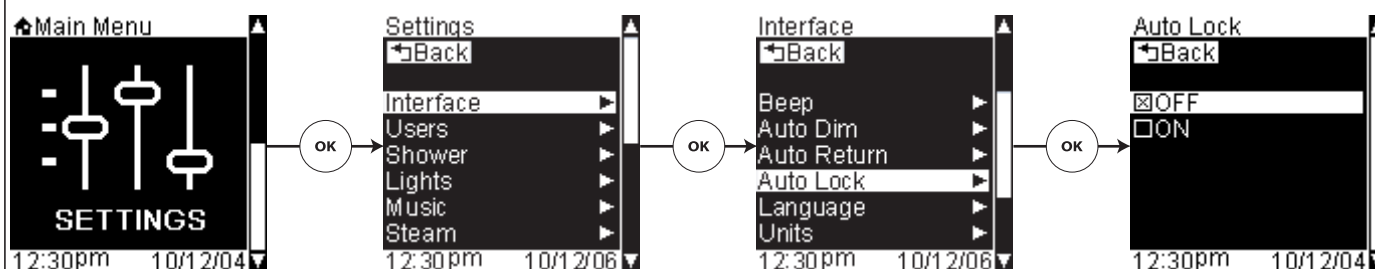

Auto Lock


Path: Settings > Interface > Auto Lock > ON or OFF

The auto lock function is defaulted to “OFF.”

This function is intended for installations where both a primary (inside shower) and auxiliary (outside shower) interface are used.

When activated, the auxiliary interface will be “locked” once an icon is pressed or the dial is turned on the primary interface; only the [Power Icon] will remain enabled on the auxiliary interface.

- To activate this function, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Auto Lock.”
- Press the [OK Icon] to select.
- Scroll to “ON” to enable or “OFF” to disable this function.
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

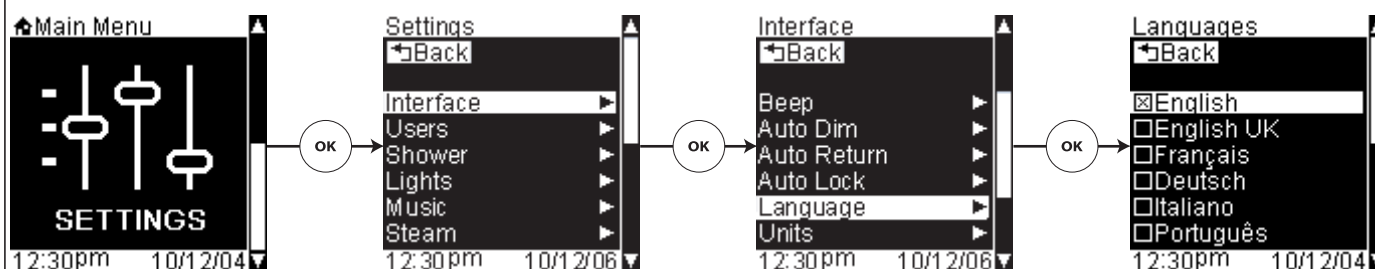

Select Language

Path: Settings > Interface > Languages

 
The interface gives the option of displaying in eight different languages.

Available Languages:

- English
- British English
- French
- German
- Italian
- Portuguese
- Spanish
- Russian

Selecting a Language

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Languages.”
- Press the [OK Icon] to select.
- Using the dial, scroll through and highlight a language.
- Press the [OK Icon] to select the highlighted language.
- Press the [Back Icon] to return to the Interface Settings menu.

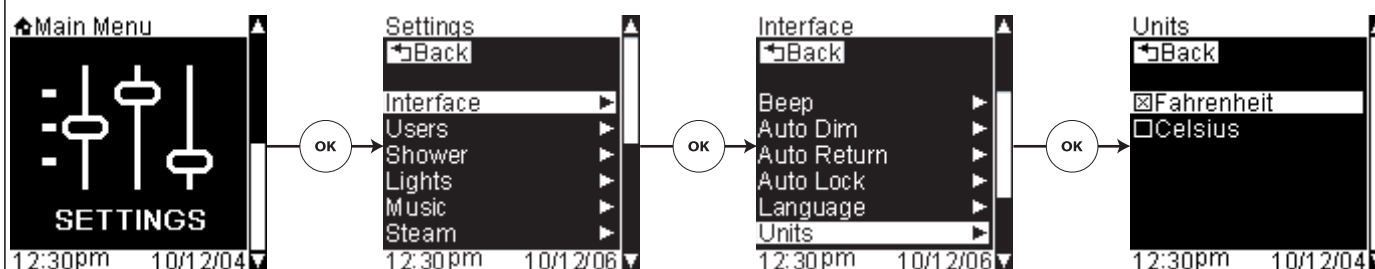


Select Temperature Unit

Path: Settings > Interface > Units

This feature allows you to display the temperature in Fahrenheit or Celsius.

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Interface."
- Press the [OK Icon] to select.
- Scroll to "Units."
- Press the [OK Icon] to select.
- Use the dial to scroll to either Fahrenheit or Celsius.
- Press the [OK Icon] to select the temperature unit.
- Press the [Back Icon] to return to the Interface Settings menu.

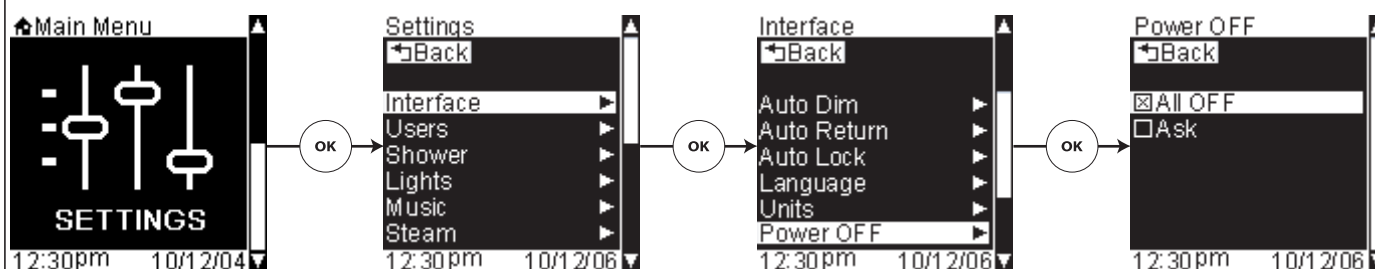

Power OFF

Path: Settings > Interface > Power OFF

This function allows you to set the functionality of the [Power Icon].

All OFF

Path: Settings > Interface > Power OFF > All OFF

If “All OFF” is activated, when the [Power Icon] is pressed all devices will turn off (shower, lights, music, and steam)

- To activate this function, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Power OFF.”
- Press the [OK Icon] to select.
- Scroll to “All OFF.”
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

Ask


Path: Settings > Interface > Power OFF > Ask

If “Ask” is activated, when the [Power Icon] is pressed your shower and steam will turn OFF and you will be prompted to select the devices you would like to turn OFF. If the [Power Icon] is pressed again all devices will turn OFF.

- To activate this function, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Interface.”
- Press the [OK Icon] to select.
- Scroll to “Power OFF.”
- Press the [OK Icon] to select.

Power OFF (cont.)

- Scroll to “Ask.”
- Press the [OK Icon] to set.
- Press the [Back Icon] to return to the Interface Settings menu.

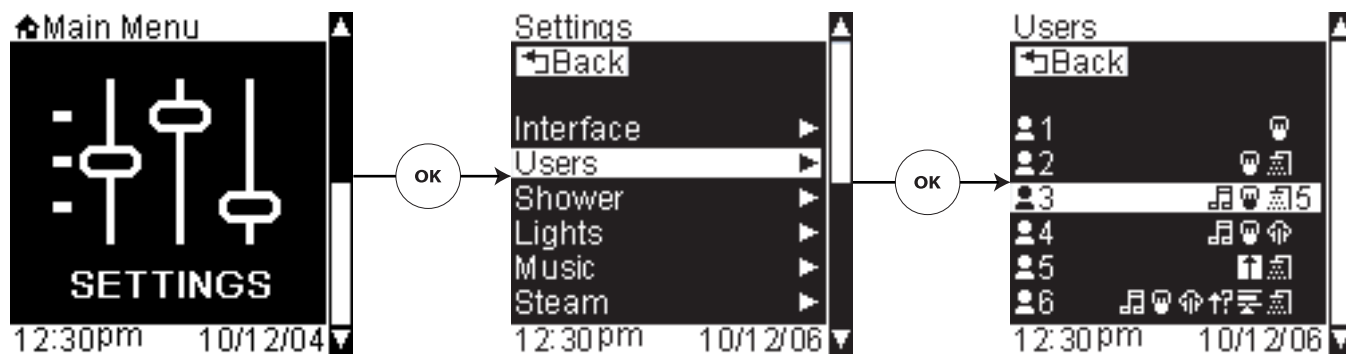

User Settings

Path: Settings > Users > [choose user 1-6]

This menu allows you to customize your user preferences all within one menu. For more information regarding specific settings refer to the "Shower Settings," "Lights Settings," "Music Settings," or "Steam Settings" sections.


The user settings menu consists of:

User # – saves custom user presets for:

Shower – sets up user preferences for systems that include a digital thermostatic valve

Steam – sets up user preferences for systems that have steam and do not include a digital thermostatic valve

NOTE: You do not have to set all the settings at one time. You can scroll to "Save As..." at any time to save your current settings. Refer to the "Save as a User Preset" section.

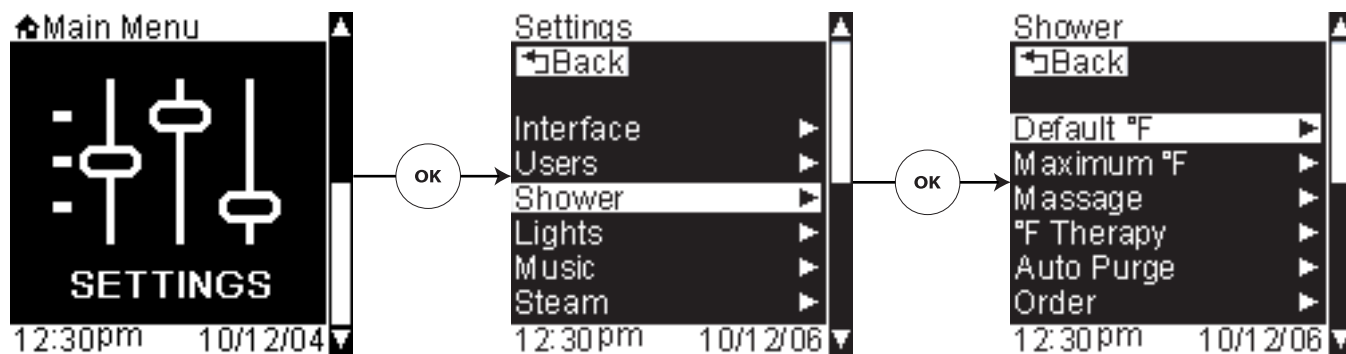

Shower Settings


Path: Settings > Shower >

This menu is only available when a Kohler digital thermostatic mixing valve is connected to the system.

The shower settings menu consists of:

- **Default °F** – sets default temperature at start-up
- **Maximum °F** – sets maximum allowable temperature
- **Massage** – activates the massage function
- **°F Therapy** – activates temperature therapy
- **Auto Purge** – turns on all water outlets at start-up until the default temperature is reached
- **Order** – changes the display order of the various water outlets
- **Not Cycling** – selects which outlets to not include in the massage cycling pattern
- **Speed** – sets the cycling speed during massage
- **Cold Water-OFF** – shuts down the shower when there is no longer enough hot water to maintain the set temperature
- **Primary** – sets the outlet to be used for normal showering

- To access the Shower Settings options, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Scroll to and select “Shower.”
- To return to the Main Menu press the [Back Icon].

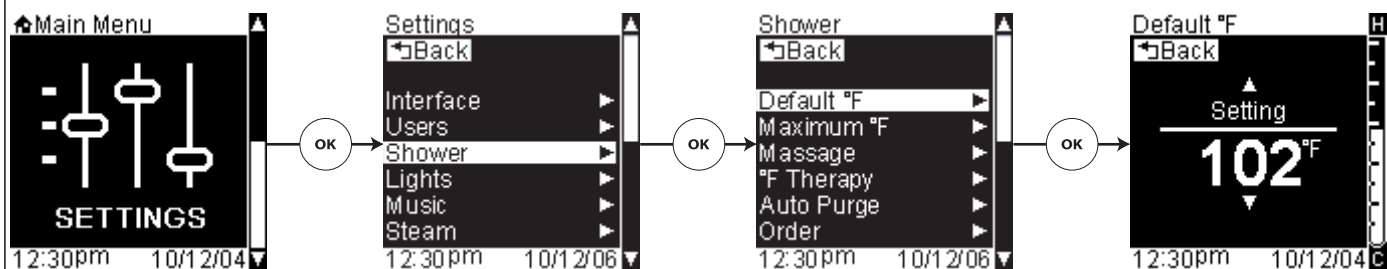


Set the Default Temperature

Path: Settings > Shower > Default °F

This feature sets the default water temperature for normal showering. The factory default setting is 102°F (39°C).

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Default °F” from the shower settings menu.
- Press the [OK Icon] to select.
- Use the dial to adjust the default temperature.
- Press the [Back Icon] to set and return to the Shower Settings Screen.

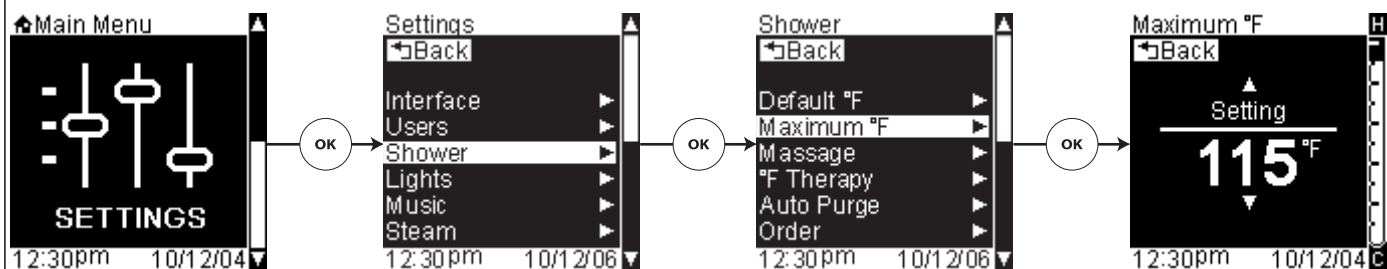


Set the Maximum Temperature

Path: Settings > Shower > Maximum °F

This feature allows you to set a maximum water temperature limit up to 120°F (49°C). The factory default is 115°F (46°C).

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Maximum °F” from the shower settings menu.
- Press the [OK Icon] to select.
- Use the dial to adjust the maximum water temperature limit.
- Press the [Back Icon] to set and return to the Shower Settings screen.

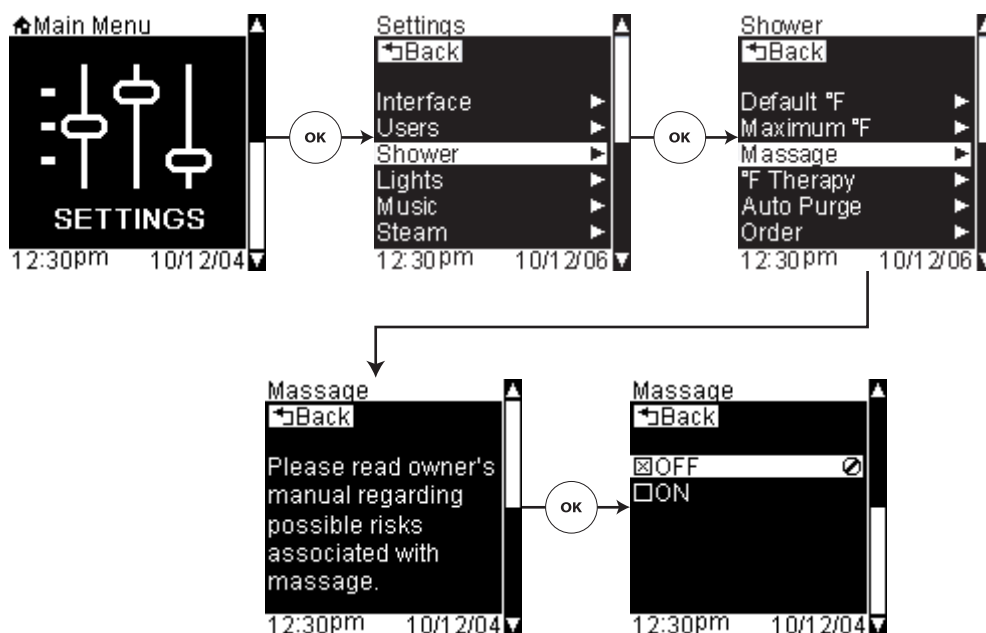

Activate the Message Functions

Path: Settings > Shower > Message > ON


IMPORTANT! Please read the following information regarding the possible risks associated with message. Consult your physician before any hydrotherapy treatment, especially if you are pregnant, have cancer or heart disease. As with many types of therapies and massages, hydromassage can be unsafe if a person has certain types of illnesses. Consult a physician to determine whether hydromassage is suitable for your case when a condition is persistent or recurrent. Elderly people and young children may be prone to exhaustion by too much heat and should avoid long full body heat treatments.

Activating the Message Function

NOTE: The message functions are defaulted to “OFF.” In order for this function to be available for use while showering, it must be first activated in the settings menu.

NOTE: You may experience temperature variations during message mode dependent on your particular installation.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Message” from the shower settings menu.
- Press the [OK Icon] to select.
- Scroll to “ON” and press the [OK Icon] to select. Your selection will be “checked” and the message functions will be activated.
- Once activated/deactivated, press the [Back Icon] until you return to the settings menu.

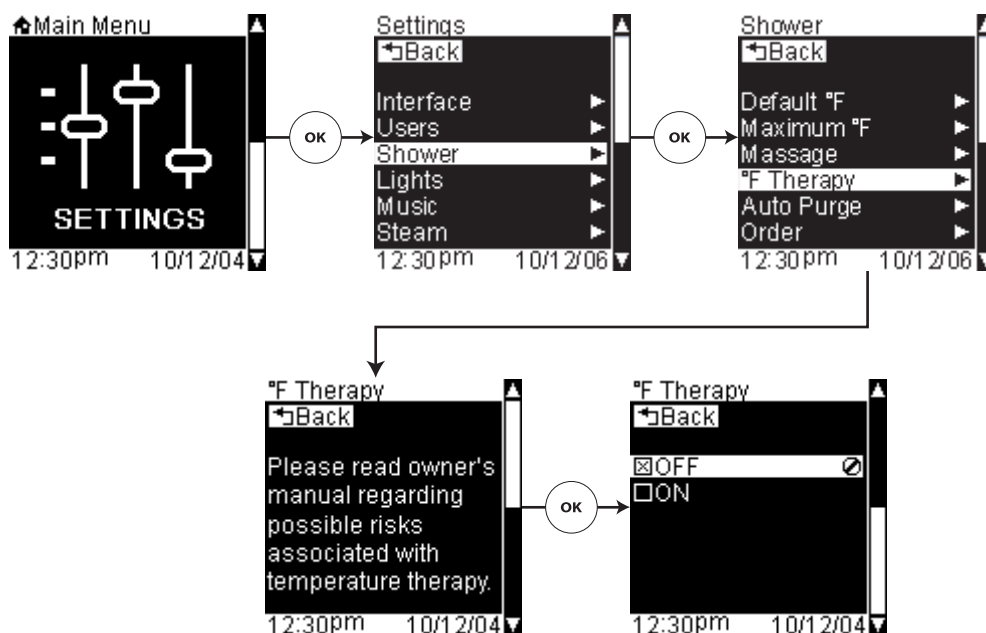

Activate Temperature Therapy

 
Path: Settings > Shower > °F Therapy

IMPORTANT! Please read the following information regarding the possible risks associated with **temperature therapy**. Consult your physician before any hydrotherapy treatment, especially if you are pregnant, have cancer or heart disease. Prolonged exposure to heat is not recommended for those with diabetes, women who are pregnant or anyone with abnormally high or low blood pressure. Elderly people and young children may be prone to exhaustion by too much heat and should avoid long full body heat treatments.

Activating Temperature Therapy

NOTE: The temperature therapy is defaulted to “OFF.” In order for this function to be available for use while showering, it must be first activated in the settings menu.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “°F Therapy” from the shower settings menu.
- Press the [OK Icon] to select.
- Scroll to “ON.”
- Press the [OK Icon] to select. Your selection will be “checked” and the temperature therapy functions will be activated.
- Once activated/deactivated, press the [Back Icon] until you return to the settings menu.

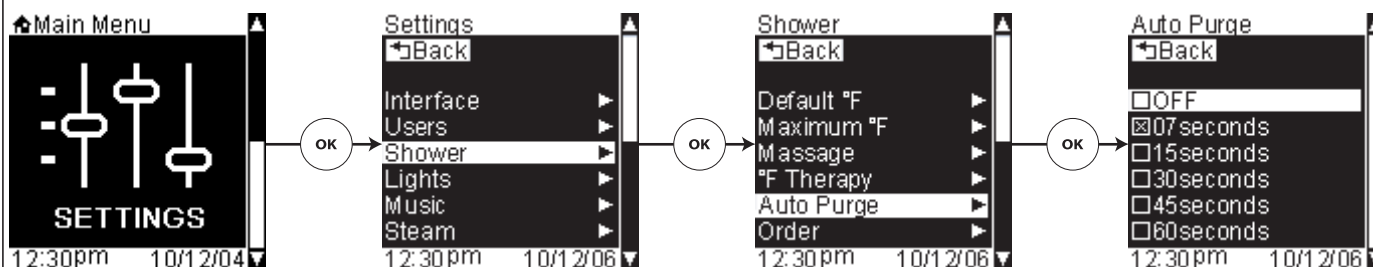

Auto Purge

 
Path: Settings > Shower > Auto Purge

The auto purge function is defaulted to “07 seconds.”

This function turns on all water outlets, except any handshowers, to purge the cold water from the shower lines and reach the set temperature faster. Once the auto purge has run for the set amount of time, the user preset will determine which outlets remain on.

The auto purge function will only activate if the shower has been inactive for 30 minutes or longer.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Auto Purge.”
- Press the [OK Icon] to select.
- Scroll to either 07 seconds, 15 seconds, 30 seconds, 45 seconds, 60 seconds or “OFF.”
- Press the [OK Icon] to select. Your selection will be “checked” and the auto purge function will be activated.
- Press the [Back Icon] to return to the Shower Settings screen.

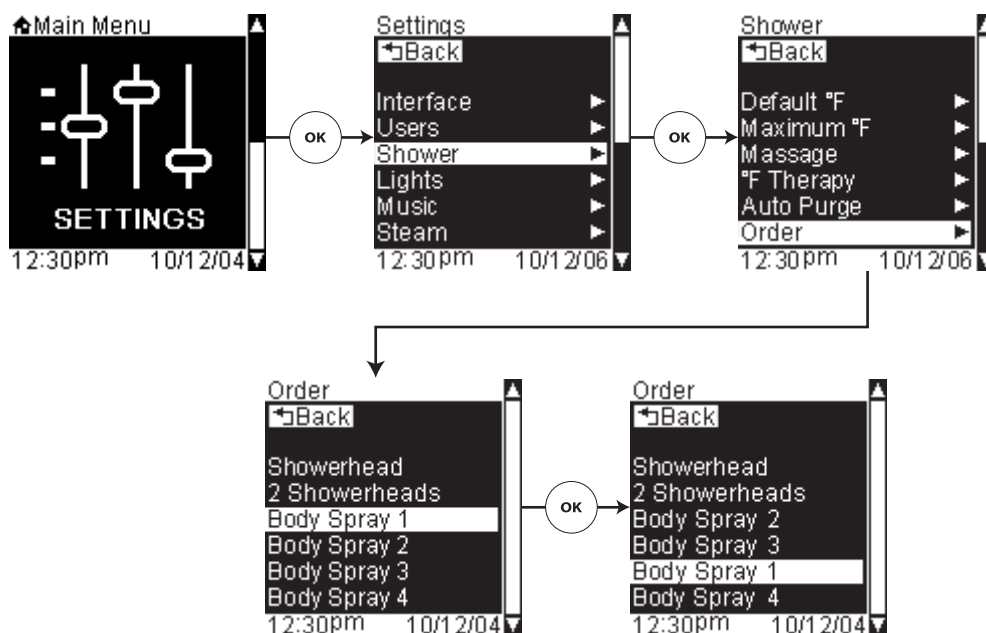


Change Water Outlet List Order

Path: Settings > Shower > Order

This function allows you to adjust the order the water outlets are displayed.

NOTE: By default, the water outlets are cycled in the order displayed. Changing the display order will not change the cycling order.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Order” from the shower settings menu.
- Press the [OK Icon] to select.
- Scroll to the name of the water outlet that you would like to move.
- Press the [OK Icon] to select that water outlet.
- Use the dial to move the water outlet either up or down in the list order.
- Press the [OK Icon] to drop that water outlet in the new position.
- Repeat for other water outlets as desired.
- Press the [Back Icon] to return to the Shower Settings screen.

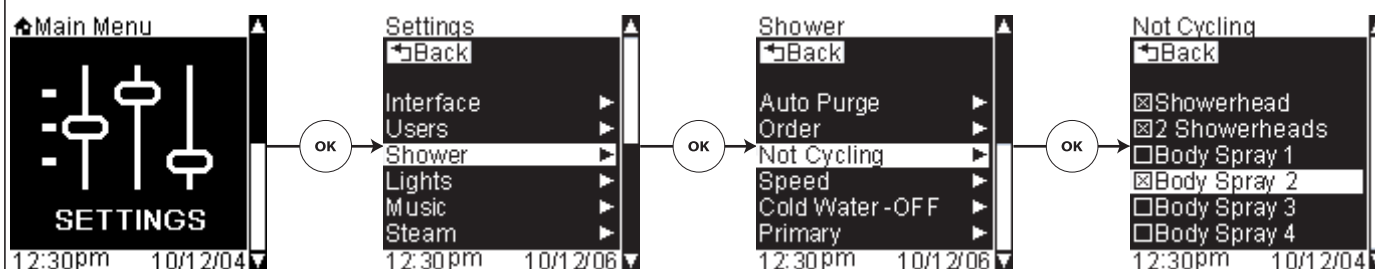


Add/Remove Water Outlets from Cycling Pattern (For Massage Functions)

Path: Settings > Shower > Not Cycling

This function sets the water outlets that will not cycle when the massage functions are activated. Only water outlets designated as body sprays or watertiles will be allowed to cycle, all other outlets will be checked as not cycling.

NOTE: Checking outlets that are designated to cycle will limit your massage functions.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Not Cycling” from the shower settings menu.
- Press the [OK Icon] to select.
- Using the dial, scroll through the water outlets to an outlet that you do not want to cycle during massage.
- Press the [OK Icon] to check the water outlets that you do not want to cycle.
- When a checked water outlet is highlighted, pressing the [OK Icon] will uncheck the water outlet and enable that water outlet to cycle.
- Press the [Back Icon] to return to the Shower Settings screen.

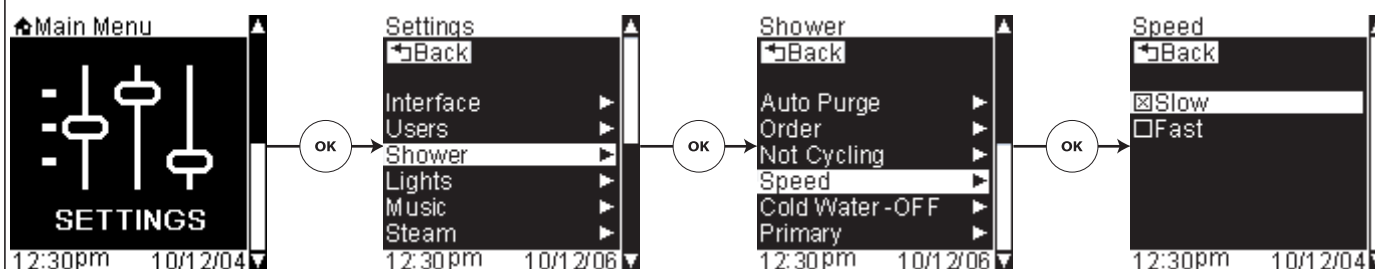


Cycling Speed (For Massage Functions)

Path: Settings > Shower > Speed > Slow or Fast

This setting adjusts the default cycling speed of the water outlets during the massage functions. The factory default setting is "Slow."

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Shower."
- Press the [OK Icon] to select.
- Scroll to "Speed" from the shower settings menu.
- Press the [OK Icon] to select.
- Use the dial to choose either "Slow" or "Fast."
- Press the [OK Icon] to set the cycling speed.
- Press the [Back Icon] to return to the Shower Settings screen.

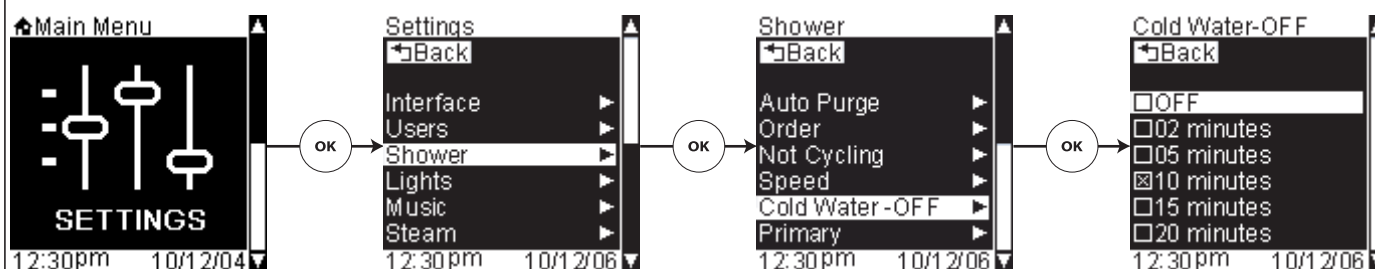


Cold Water OFF

Path: Settings > Shower > Cold Water-OFF

This function allows you to set the length of time that the shower will continue to run once the system detects there is not enough hot water to maintain the set temperature.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Shower.”
- Press the [OK Icon] to select.
- Scroll to “Cold Water-OFF” from the shower settings menu.
- Press the [OK Icon] to select.
- Scroll to either 02 minutes, 05 minutes, 10 minutes, or 20 minutes.
- Press the [OK Icon] to select. Your selection will be “checked.”
- Press the [Back Icon] to return to the Shower Settings screen.

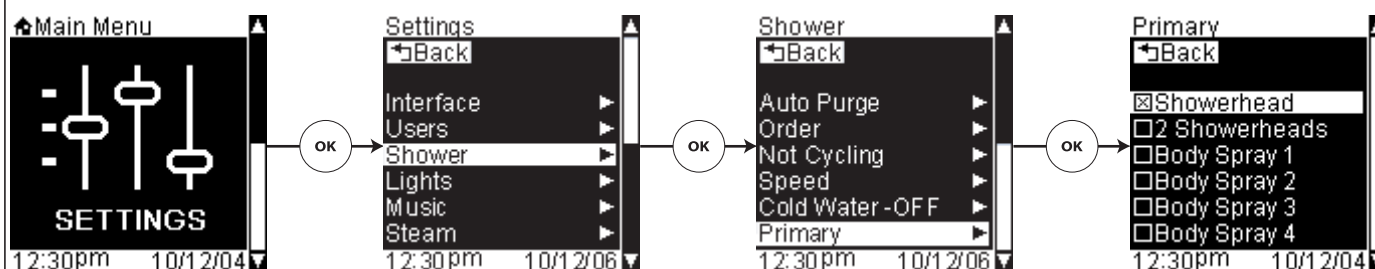


Select Primary Water Outlet – Custom Only

Path: Settings > Shower > Primary

This menu is only available if a custom configuration is selected. Refer to the "Configurations" section.

This sets the water outlet that the user will use to take regular showers. This is the water outlet that will constantly be on, usually labeled "Showerhead." **This water outlet will not cycle during massage.**

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Shower."
- Press the [OK Icon] to select.
- Scroll to "Primary" from the shower settings menu.
- Press the [OK Icon] to select.
- Scroll to the water outlet that you wish to designate as the primary water outlet.
- Press the [OK Icon] to set the primary water outlet.

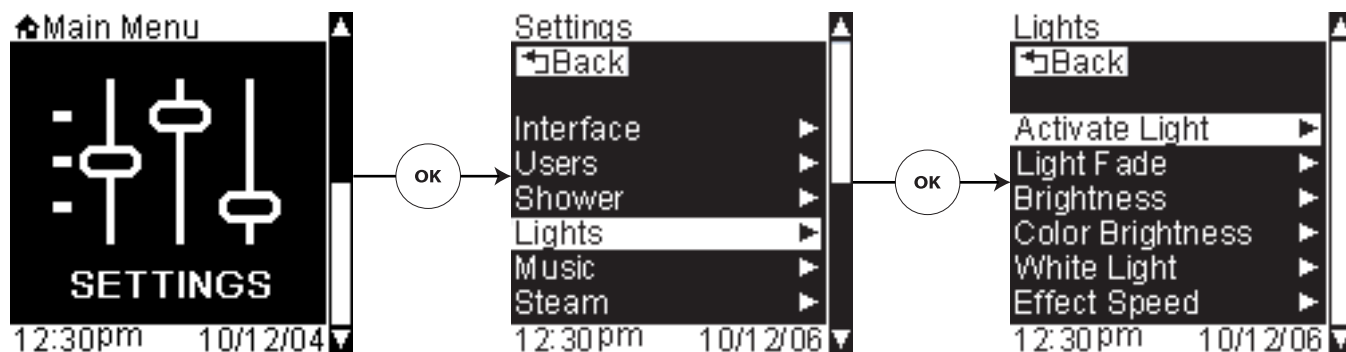


Light Settings

Path: Settings > Lights

The lights settings menu consists of:

- **Activate Light** – activates the light menu, for systems where incandescent lighting is not connected via the media module the incandescent lighting menus can be set to not display
- **Light Fade** – when activated, this function controls the speed the lights (incandescent and chroma) will fade ON or OFF
- **Brightness** – sets the brightness level for incandescent lights
- **Color Brightness** – (only displayed when a chroma lighting is present) - sets the brightness level for chroma lights
- **White Light** – (only displayed when a chroma lighting is present) - sets the warmth for chroma lights
- **Effect Speed** – (only displayed when a chroma lighting is present) – sets the speed of movement for the chroma lighting effects

- To access the light settings options, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Scroll to and select “Lights.”
- To return to the Main Menu press the [Back Icon].

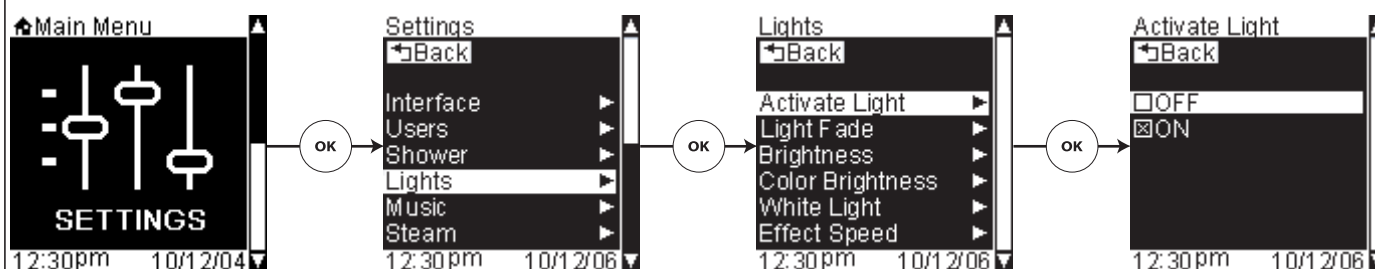

Activate Light


Path: Settings > Lights > Activate Light

This function activates the light menu. If "OFF" is selected, the incandescent lighting menus will not be displayed. Choose "OFF" if your incandescent lighting is not connected via the media module. The factory default for this setting is "ON."

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Lights."
- Press the [OK Icon] to select.
- Highlight "Activate Light."
- Press the [OK Icon] to select.
- Scroll to and select "ON." Your selection will be "checked."

The incandescent lighting menu will now be available.

- Press the [Back Icon] to return to the Light Settings screen.

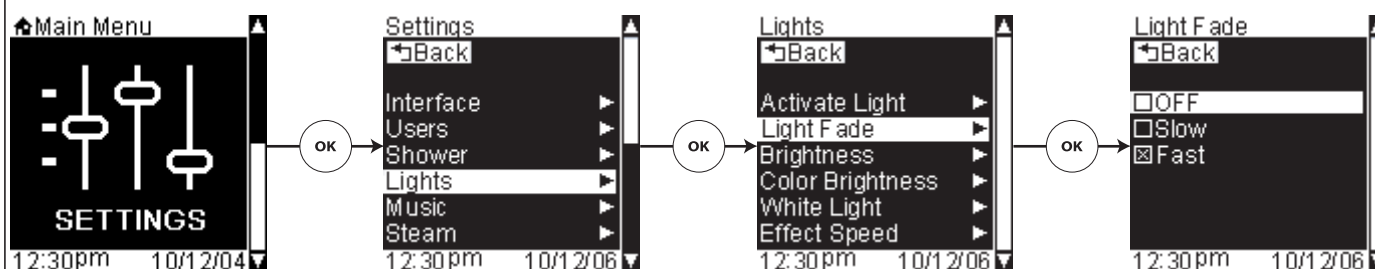

Light Fade


Path: Settings > Lights > Light Fade

This menu item is only available if “Activate Light” is not turned OFF and/or chroma lighting is connected to the system.

This function, when activated, controls the speed the lights (both incandescent and chroma lighting) will fade ON or OFF.

Light Fade options include OFF, Slow, and Fast. “OFF” turns the lights ON or OFF immediately without fade. “Slow” gradually fades the lights ON or OFF. “Fast” quickly fades the lights ON or OFF.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Lights.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and highlight “Light Fade.”
- Press the [OK Icon] to select.
- Scroll to and select “OFF,” “Slow,” or “Fast.” Your selection will be “checked.”
- Press the [Back Icon] to return to the Light Settings screen.

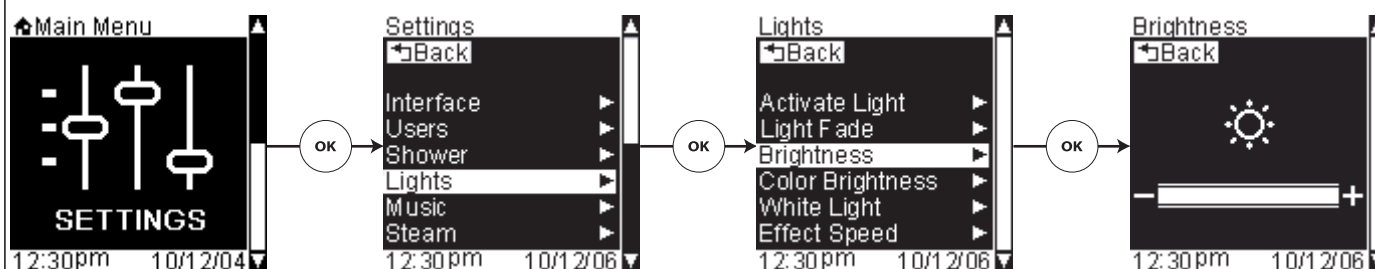


Incandescent Brightness

Path: Settings > Lights > Brightness

This menu item is only available if “Activate Light” is not turned OFF.

This function allows you to adjust the brightness of your incandescent lighting.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Lights.”
- Press the [OK Icon] to select.
- Using the dial, scroll to “Brightness.”
- Press the [OK Icon] to select.
- Turn the dial counterclockwise to dim the lights and clockwise to brighten.
- Once the brightness is set press the [Back Icon] to return to the Light Settings screen.

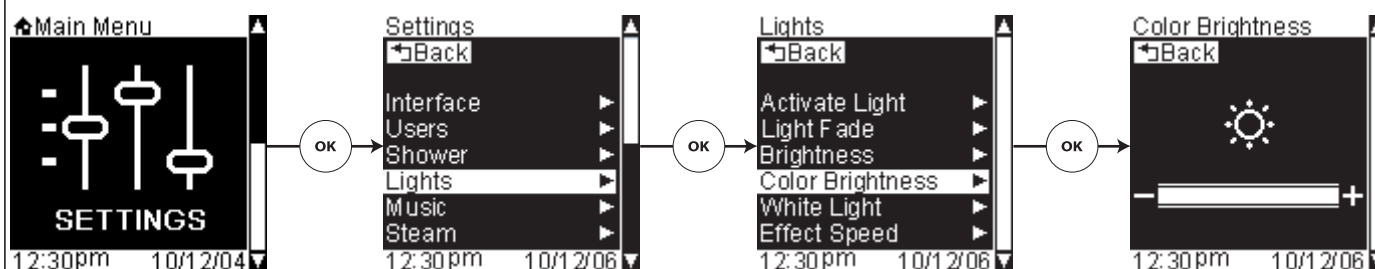


Color Brightness

Path: Settings > Lights > Color Brightness

This menu item is only available if chroma lighting is connected to the system.

This function allows you to adjust the brightness of your chroma lighting.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Lights.”
- Press the [OK Icon] to select.
- Using the dial, scroll to “Color Brightness.”
- Press the [OK Icon] to select.
- Turn the dial counterclockwise to dim the lights and clockwise to brighten.
- Once the brightness is set as desired, press the [Back Icon] to return to the Light Settings screen.

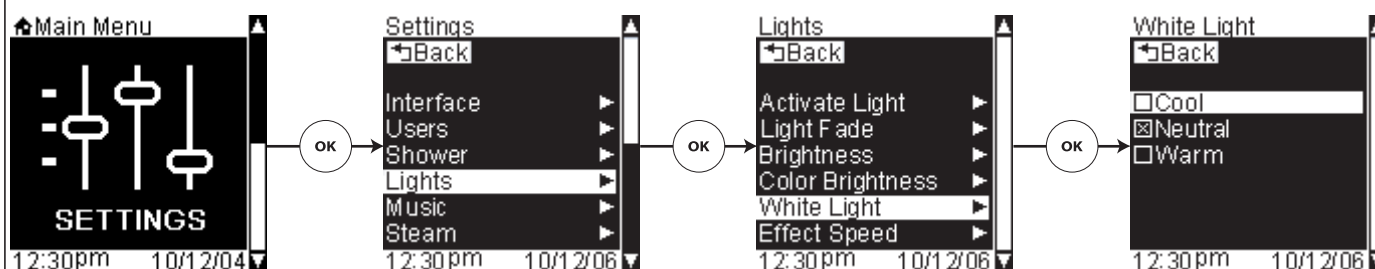


White Light

Path: Settings > Lights > White Light

This menu item is only available if chroma lighting is connected to the system.

This function allows you to adjust the tone of your chroma lighting.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Lights.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “White Light.”
- Press the [OK Icon] to select.
- Scroll to and highlight “Cool,” “Neutral,” or “Warm.”
- Press the [OK Icon] to make your selection. Your selection will be “checked.”
- Press the [Back Icon] to return to the Light Settings screen.

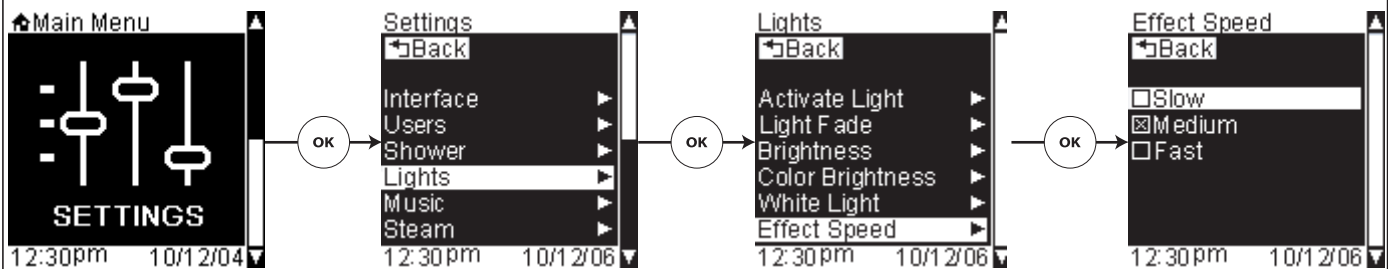


Chroma Lighting Effect Speed

Path: Settings > Lights > Effect Speed

This menu item is only available if chroma lighting is connected to the system.

This function allows you to adjust the speed of your chroma lighting effects.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Lights.”
- Press the [OK Icon] to select.
- Using the dial, scroll to “Effect Speed.”
- Press the [OK Icon] to select.
- Scroll to and highlight “Slow,” “Medium,” or “Fast.”
- Press the [OK Icon] to make your selection. Your selection will be “checked.”
- Press the [Back Icon] to return to the Light Settings screen.

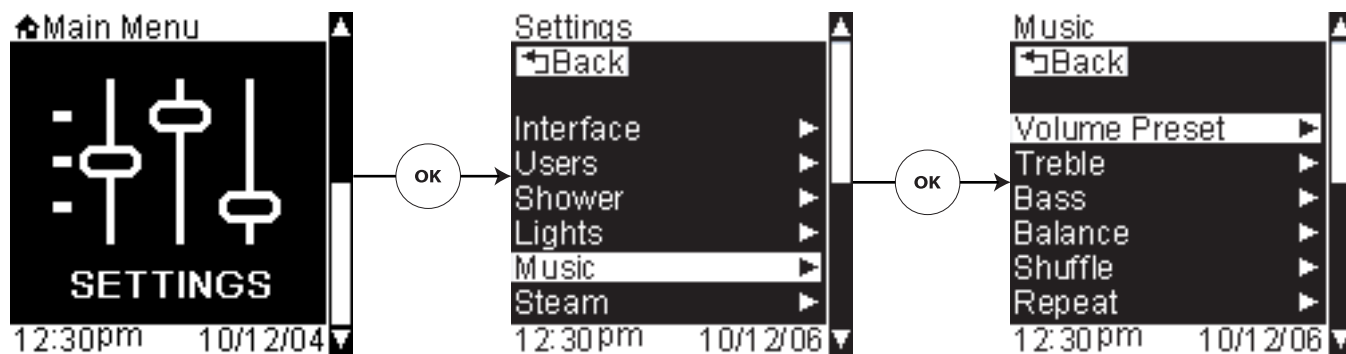


Music Settings

Path: Settings > Music

The music settings menu consists of:

- **Volume Preset** – sets the volume the music will be when the music is first turned ON
- **Treble** – sets the music treble level
- **Bass** – sets the music bass level
- **Balance** – sets the left to right speaker balance
- **Shuffle** – sets whether the music will play a playlist in list order or random
- **Repeat** – sets whether music will play once, repeat one song, or repeat all
- **Default Dial** – sets whether the dial will control volume adjustment or song selection

- To access the Music Settings options, from the Main Menu scroll to “Settings” and press the [OK Icon] to select.
- Scroll to and select “Music.”
- To return to the Main Menu press the [Back Icon].

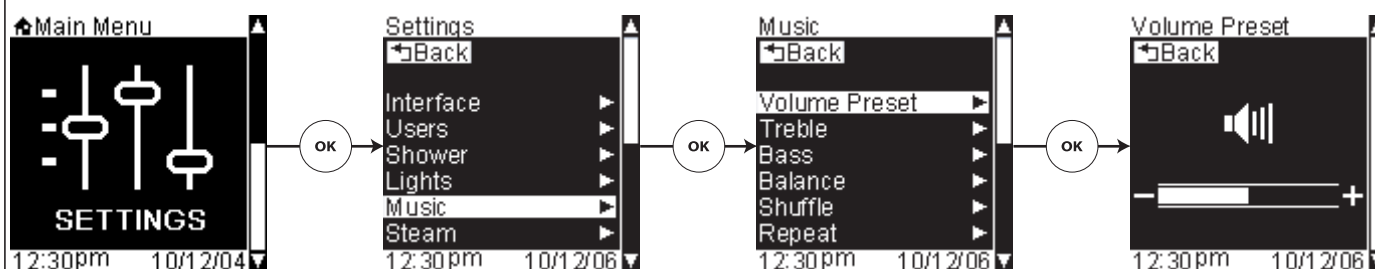


Volume Preset

Path: Settings > Music > Volume Preset

The preset volume is the default volume the music will be when the music is first turned ON.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Highlight “Volume Preset.”
- Press the [OK Icon] to select.
- Use the dial to adjust the volume level.
- Press the [Back Icon] to set and return to the Music Settings screen.

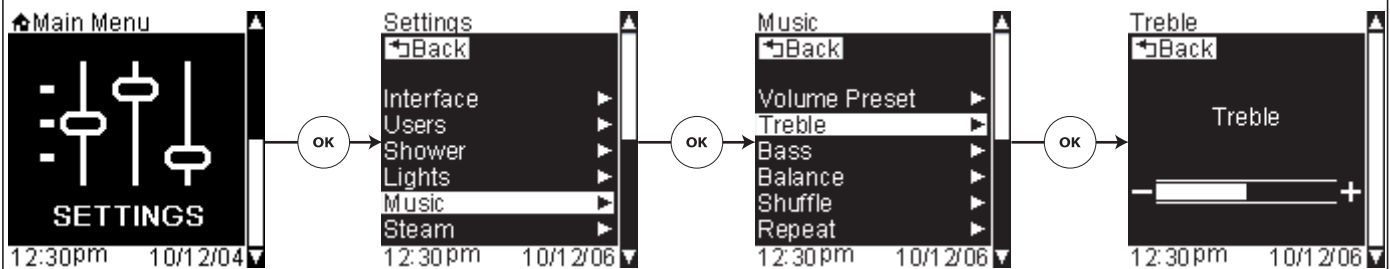


Treble

Path: Settings > Music > Treble

This function sets the default music treble level.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Treble.”
- Press the [OK Icon] to select.
- Use the dial to adjust the treble level.
- Press the [Back Icon] to set and return to the Music Settings screen.

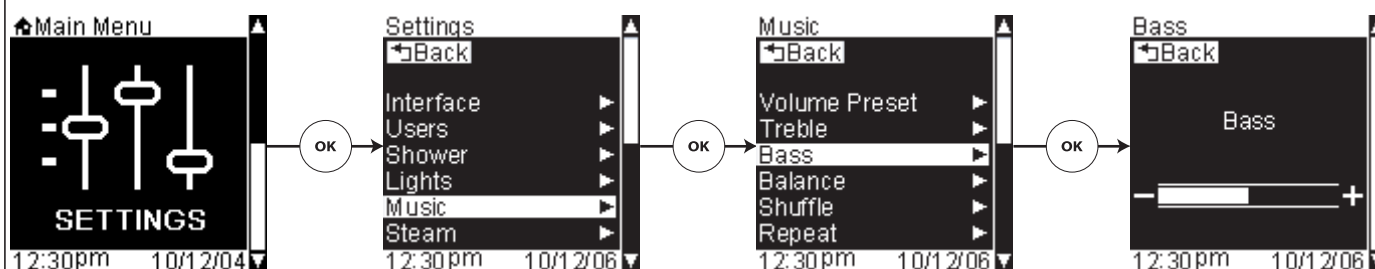


Bass

Path: Settings > Music > Bass

This function sets the default the music bass level.

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Scroll to “Bass” and press the [OK Icon] to select.
- Use the dial to adjust the bass level.
- Press the [Back Icon] to set and return to the Music Settings screen.

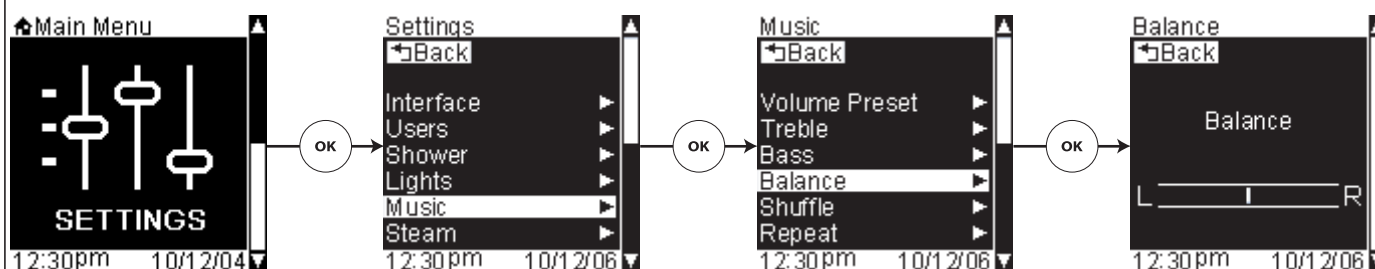


Balance

Path: Settings > Music > Balance

This function sets the default left to right speaker balance.

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Balance.”
- Press the [OK Icon] to select.
- Use the dial to adjust the left to right speaker balance.
- Press the [Back Icon] to set and return to the Music Settings screen.

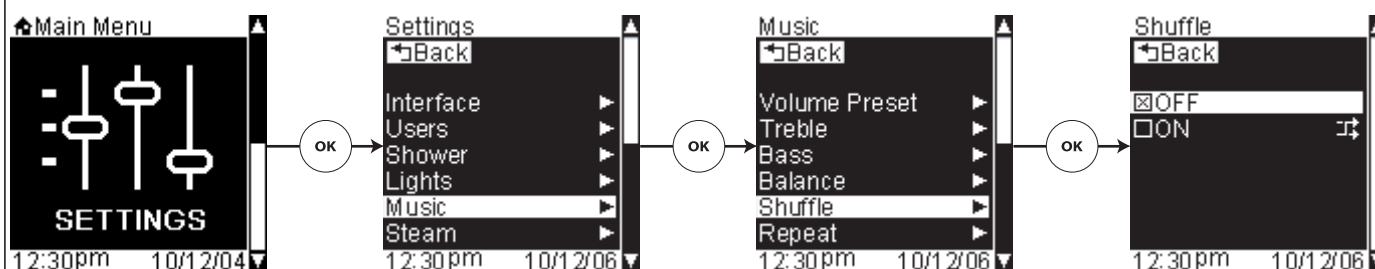


Shuffle

Path: Settings > Music > Shuffle

This setting controls whether the Library music will play a song list in list order or random.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Shuffle.”
- Press the [OK Icon] to select.
- Scroll to and select “ON” to activate shuffle, or “OFF” to disable. Your selection will be “checked.”
- Press the [Back Icon] to set and return to the Music Settings screen.

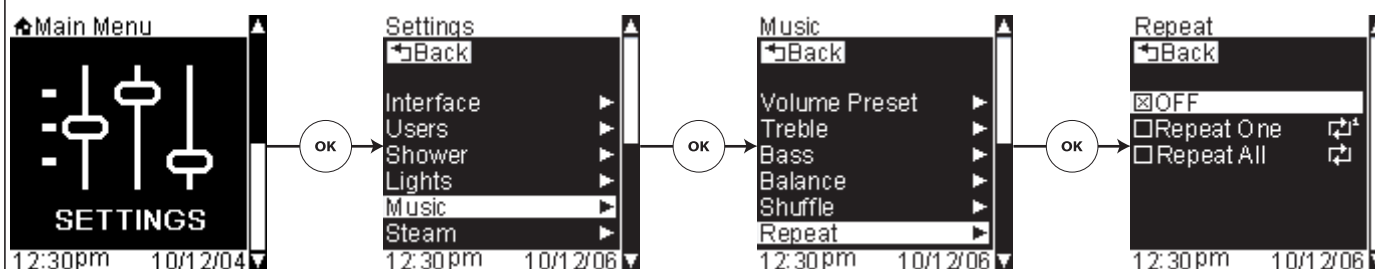


Repeat

Path: Settings > Music > Repeat

This setting controls whether music will play once, repeat one song, or repeat all.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Repeat.”
- Press the [OK Icon] to select.
- Scroll to and select “OFF,” “Repeat One,” or “Repeat All.” Your selection will be “checked.”
- Press the [Back Icon] to set and return to the Music Settings screen.

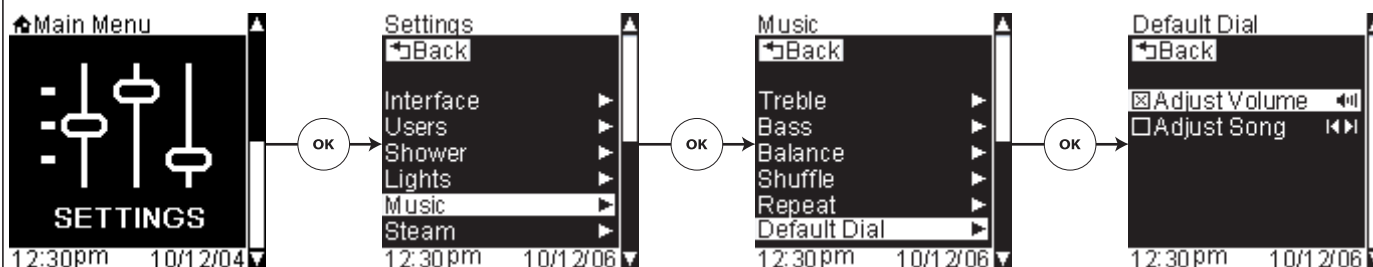


Default Dial

Path: Settings > Music > Default Dial

This setting controls whether the dial will control volume adjustment or song selection.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Music.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Default Dial.”
- Press the [OK Icon] to select.
- Scroll to and select “Adjust Volume” or “Adjust Song.” Your selection will be “checked.”
- Press the [Back Icon] to set and return to the Music Settings screen.

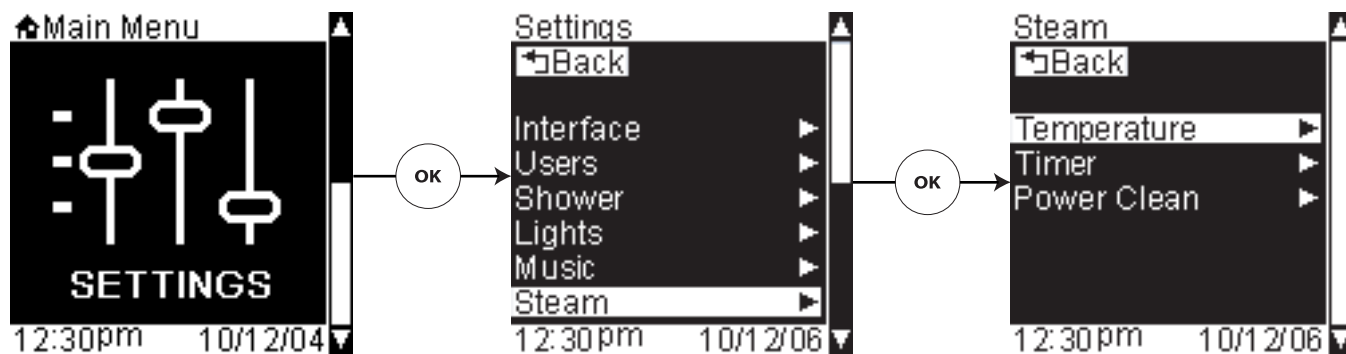


Steam Settings

Path: Settings > Steam

The steam settings menu consists of:

- **Temperature** – sets the temperature of the steam when the steam function is first turned ON
- **Timer** – sets the duration the steam will remain ON
- **Power Clean** – activates an automatic cleaning function for proper, safe maintenance of your steam generator

- To access the Steam Settings options, from the Main Menu scroll to “Settings” and press the [OK Icon] to select.
- Scroll to and select “Steam.”
- To return to the Main Menu press the [Back Icon].

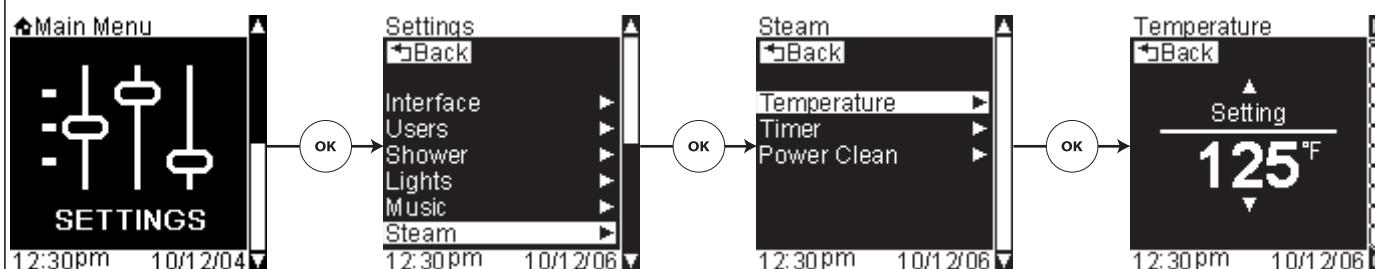


Steam Temperature

Path: Settings > Steam > Temperature

This function sets the default temperature of the steam when the steam function is first turned ON.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Steam.”
- Press the [OK Icon] to select.
- Highlight “Temperature” and press the [OK Icon] to select.
- Use the dial to adjust the temperature as desired
- Press the [Back Icon] to set and return to the Steam Settings screen.

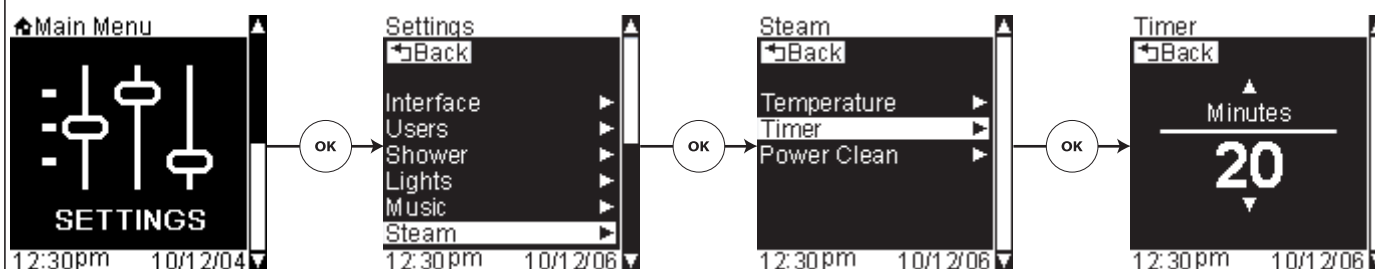


Steam Timer

Path: Settings > Steam > Timer

This function sets the default duration the steam will remain ON.

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "Steam."
- Press the [OK Icon] to select.
- Use the dial to scroll to "Timer."
- Press the [OK Icon] to select.
- Use the dial to set the duration the steam will run at start-up. The maximum allowable time is 20 minutes.
- Press the [Back Icon] to set and return to the Steam Settings screen.

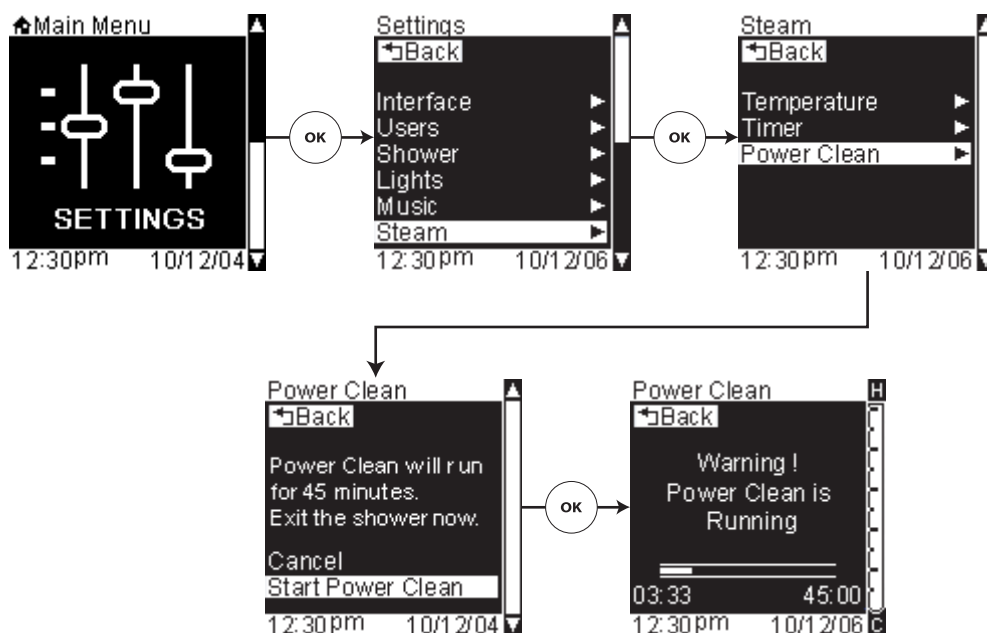

Steam Power Clean


Path: Settings > Steam > Power Clean

This function activates an automatic cleaning function for proper, safe maintenance of your steam generator.

NOTICE: Your steam system is set to allow for 600 minutes of usage before a cleaning cycle is required. After 600 minutes you will be notified that three steam uses are available before a “Power Clean” cycle is required. If after the three uses a cleaning cycle has not been run, your system will bring you directly to the “Power Clean” screen. The cleaning cycle must be completed in order to reset the 600-minute counter and enable steam use.

NOTICE: Power clean will run for 45 minutes. Once activated, you must remain out of the shower until the cleaning cycle has completed.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “Steam.”
- Press the [OK Icon] to select.
- Use the dial to scroll to “Start Power Clean.”
- Press the [OK Icon] to begin the cleaning cycle. Exit the shower immediately.

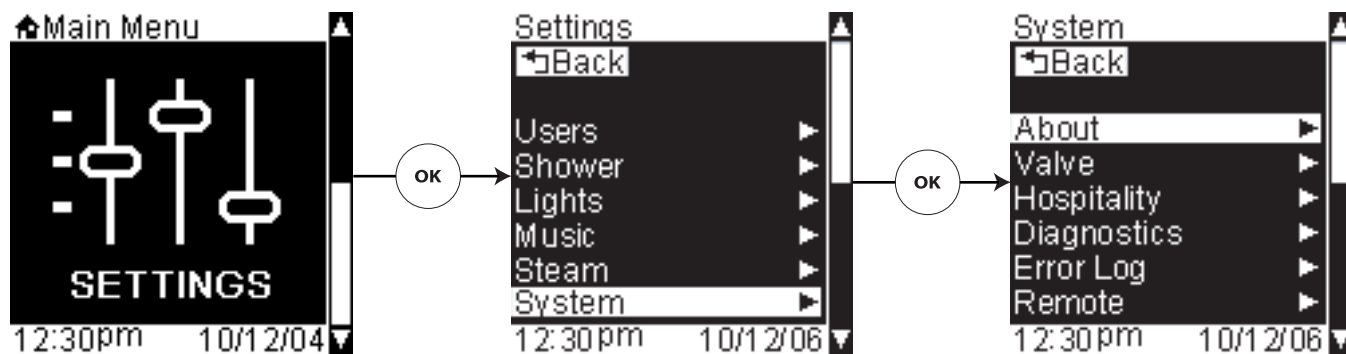


System Settings

Path: Settings > System

The system settings menu consists of:

- **About** – displays the logo screen and software versions
- **Valve** – sets the configuration of your shower installation
- **Hospitality** – disables and removes all save functions, locks all current device settings and saved user settings
- **Diagnostics** – system performs a check of all device connections and provides a status
- **Error Log** – displays any applicable error code information
- **WiFi Security** – input your WEP or WPA network password to allow system access to your music server (This menu item will not be visible if the system detects an Ethernet connection.
- **Music Software** – checks for software updates available for download, activation of internet radio quality monitoring, and display of the IP address
- **Version** – Factory Use Only
- **Reset** – restores original interface settings or clears all user settings

- To access the System Settings options, from the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Scroll to and select “System.”
- To return to the Main Menu press the [Back Icon].

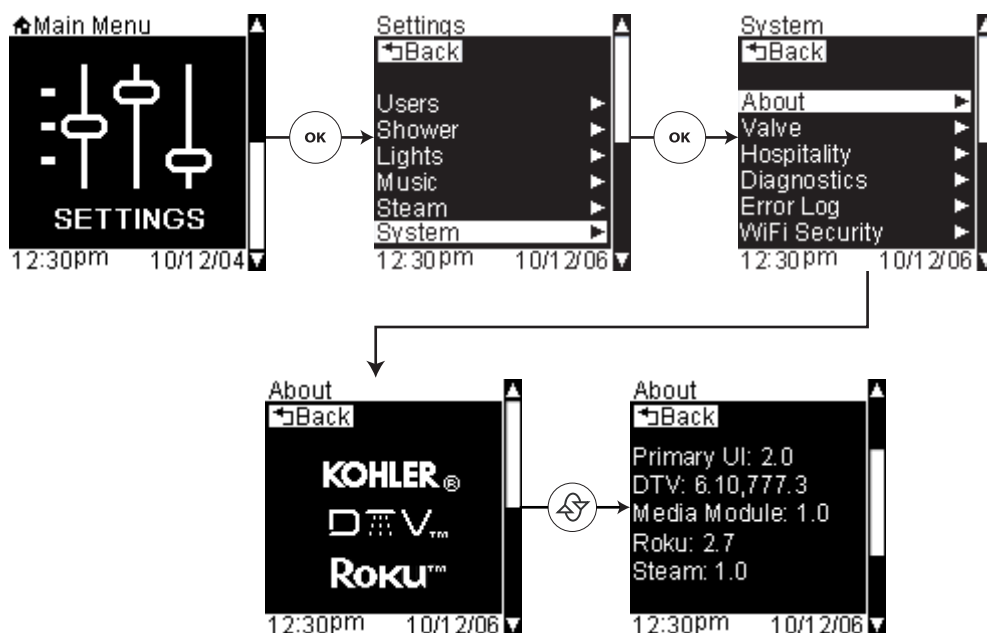


About

Path: Settings > System > About

Select this option to display the logo and software version currently running on your interface.

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “System.”
- Press the [OK Icon] to select.
- Scroll to “About.”
- Press the [OK Icon] to select.
- Scroll to the bottom of the screen to view the current software versions for all components currently connected to your system.
- Press the [Back Icon] to return to the system settings menu.

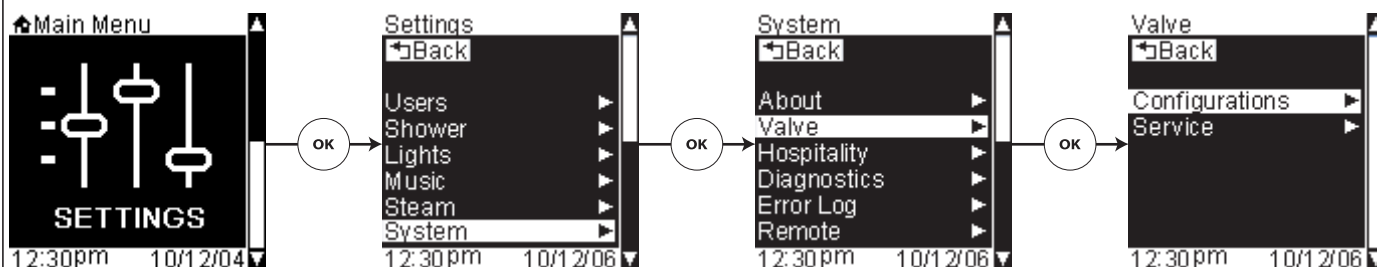


Valve

Path: Settings > System > Valve

This function sets the configuration of your shower installation.

- Refer to the “Set the Valve Configuration – Preset Options” or “Set the Valve Configuration – Custom Options” section.

 Set Valve Configurations - Preset Options

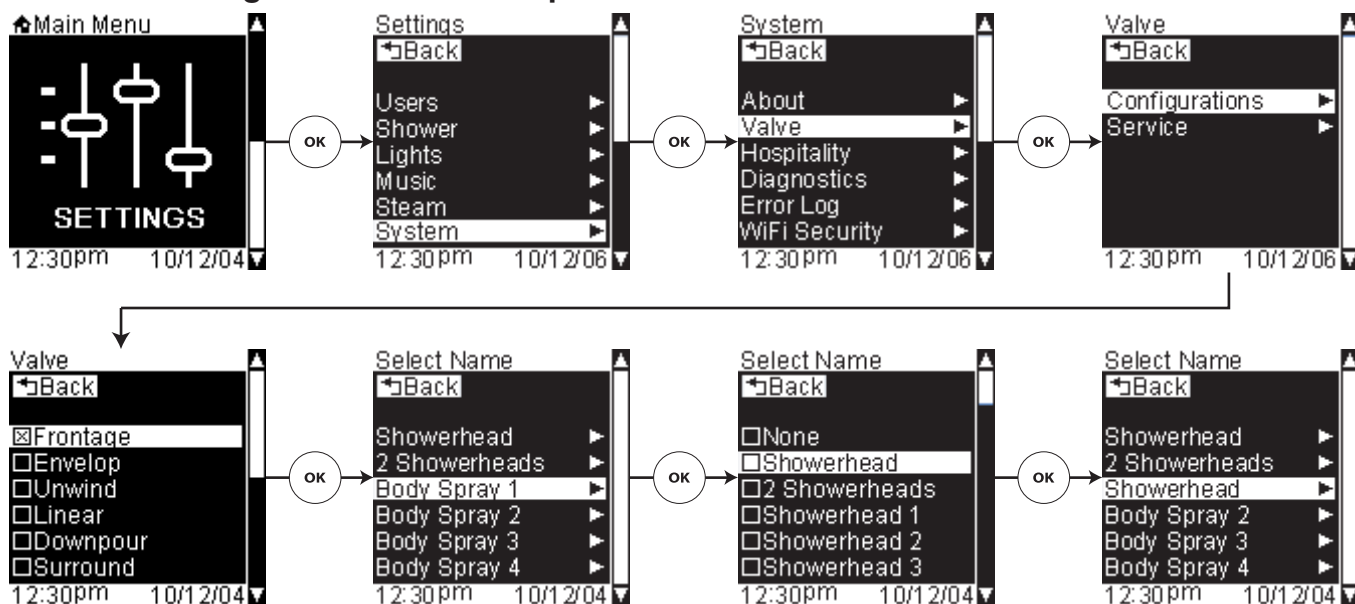

Set the Valve Configuration – Preset Options

Path: Settings > System > Valve > Configurations > *Choose your configuration*

Sets the configuration of your shower installation.*

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “System.”
- Press the [OK Icon] to select.
- Scroll to “Valve.”
- Press the [OK Icon] to select.
- Scroll to “Configurations.”
- Press the [OK Icon] to select.
- Scroll to the configuration* of your shower.
- Press the [OK Icon] to select.

NOTE: Your outlet names will be listed in order from outlet 1 to outlet 6. This screen allows you to change the outlet display name only and will not change the outlet cycling order during massage.

- If the outlet names listed are correct for your system, press the [Back Icon] twice to exit the initial set-up sequence.

To rename outlets display names:

 
- Scroll to the outlet to be renamed.
- Press the [OK Icon] to select.
- Scroll to the new outlet name.
- Press the [OK Icon] to select. The new name will now be displayed.

Set the Valve Configuration – Preset Options (cont.)

□ Repeat for remaining outlets as needed.

* Refer to the “Configurations” section for illustrations and descriptions of the preconfigured options. For Custom configurations, proceed to “Set the Valve Configuration - Custom Options.”

Set Valve Configurations - Custom

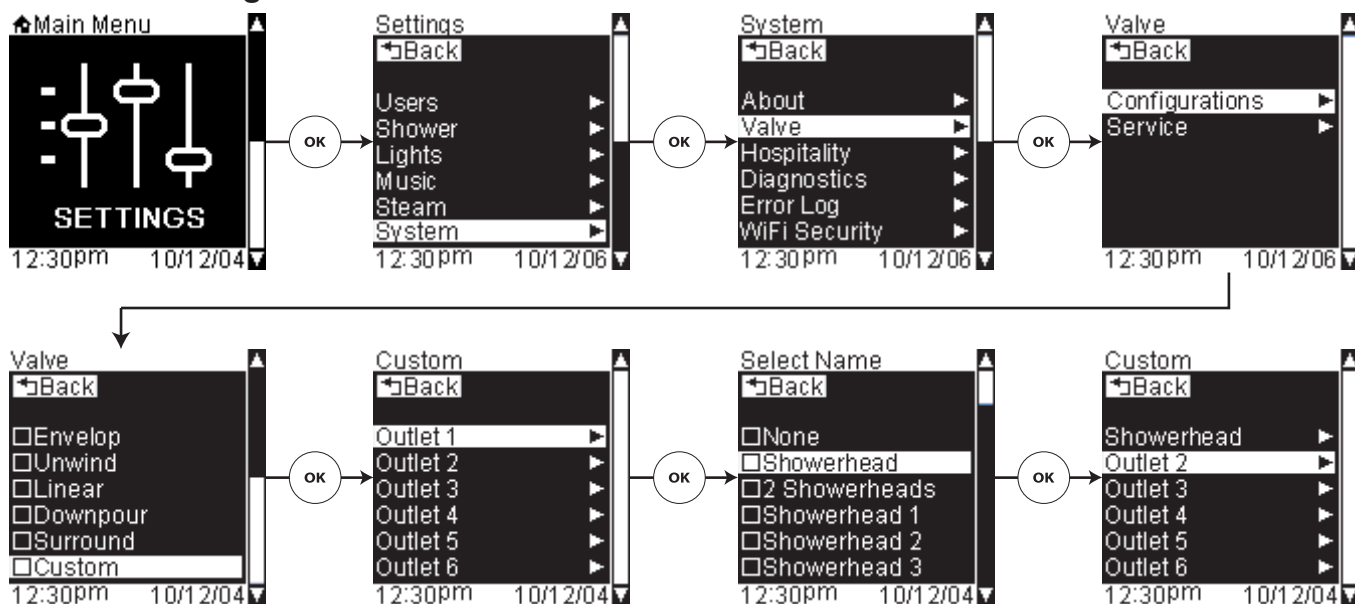

Set the Valve Configuration – Custom Options

Path: Settings > System > Valve > Configurations > Custom

Set the outlet names of your custom configuration to match your shower installation.

- From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “System.”
- Press the [OK Icon] to select.
- Scroll to “Valve.”
- Press the [OK Icon] to select.
- Scroll to “Custom.” For preprogrammed configurations, refer to the “Set the Valve Configuration - Preset Options.”
- Press the [OK Icon] to select.
- Scroll to “Outlet 1.”
- Press the [OK Icon] to select.
- Using the dial, scroll through the list of available water outlet options (see “Available Water Outlet Options” list), highlight the appropriate water outlet name for your shower configuration.
- Press the [OK Icon] to set the new water outlet name.
- Repeat for all remaining water outlets as needed.

Available Water Outlet Options:

- Showerhead
- 2 Showerheads
- Showerhead 1
- Showerhead 2
- Showerhead 3

Set the Valve Configuration – Custom Options (cont.)

 
- Showerhead 4
- Showerhead 5
- Showerhead 6
- Handshower
- 2 Handshowers
- Handshower 1
- Handshower 2
- Handshower 3
- Handshower 4
- Handshower 5
- Handshower 6
- Bodyspray
- 2 Bodysprays
- Bodyspray 1
- Bodyspray 2
- Bodyspray 3
- Bodyspray 4
- Bodyspray 5
- Bodyspray 6
- Overhead
- 2 Overheads
- Overhead 1
- Overhead 2
- Overhead 3
- Overhead 4
- Overhead 5
- Overhead 6
- WaterTile
- 2 WaterTiles
- WaterTile 1
- WaterTile 2
- WaterTile 3
- WaterTile 4
- WaterTile 5
- WaterTile 6
- WaterTile S.H.
- 2 WaterTiles S.H.
- WaterTile S.H. 1
- WaterTile S.H. 2
- WaterTile S.H. 3
- WaterTile S.H. 4
- WaterTile S.H. 5
- WaterTile S.H. 6
- WaterTile Rain
- WaterTile Rain 1
- WaterTile Rain 2
- WaterTile Rain 3
- WaterTile Rain 4

Service

Path: Settings > System > Valve > Service

IMPORTANT! Do not attempt to service the system yourself. Please consult an authorized Kohler Co. service representative for any servicing needs.

Hospitality Mode

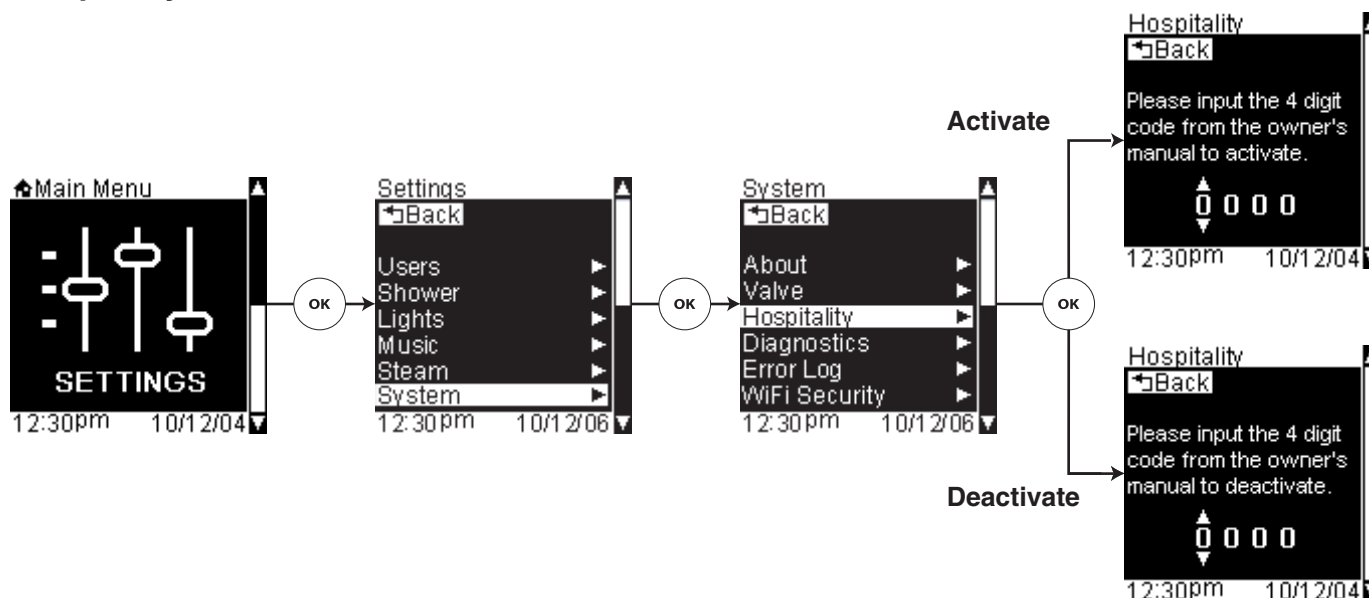

Hospitality Mode

Path: Settings > System > Hospitality

Hospitality mode disables and removes all save functions, locks all current settings and saved user settings from being changed.

When the hospitality mode is active, only the following options will be available from the settings menu: About, Clean, Hospitality, and Diagnostics.

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Valve."
- Scroll to "Hospitality."
- Press the [OK Icon] to select.

Activate

To activate the hospitality function, input the four-digit code **1012**.

- Use the dial to scroll to the first digit in the code.
- Press the [OK Icon] to set the selected number and proceed to the next digit.
- Repeat for all four digits of the code.

 
Deactivate

To deactivate the hospitality function, input the four-digit code **1012**.

- Use the dial to scroll to the first digit in the code.

Hospitality Mode (cont.)

- Press the [OK Icon] to set the selected number and proceed to the next digit.
- Repeat for all four digits of the code.

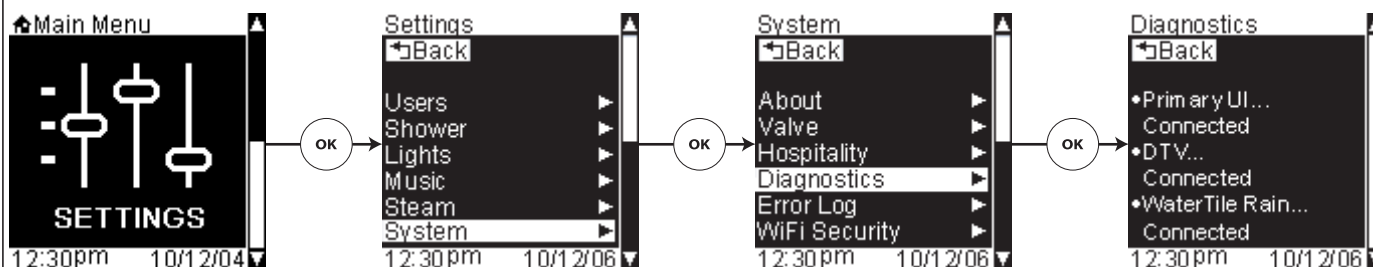


Diagnostics

Path: Settings > System > Diagnostics

Upon entering this screen your system will begin a check of all device connections and display the status of those connections. This information is provided to assist an authorized Kohler Co. service representative in servicing your system.

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Diagnostics."
- Press the [OK Icon] to select to display the results of the diagnostics check.

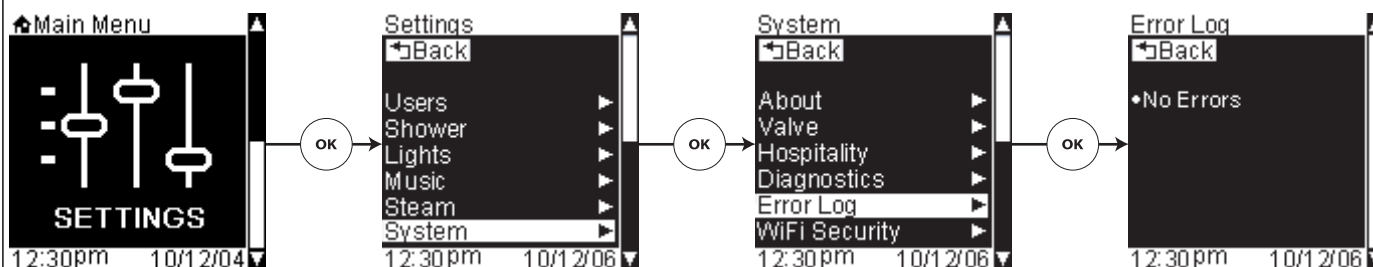


Error Log

Path: Settings > System > Error Log

This screen will display any applicable error code information and assist an authorized Kohler Co. service representative in servicing your system.

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Error Log."
- Press the [OK Icon] to select and display the error log.

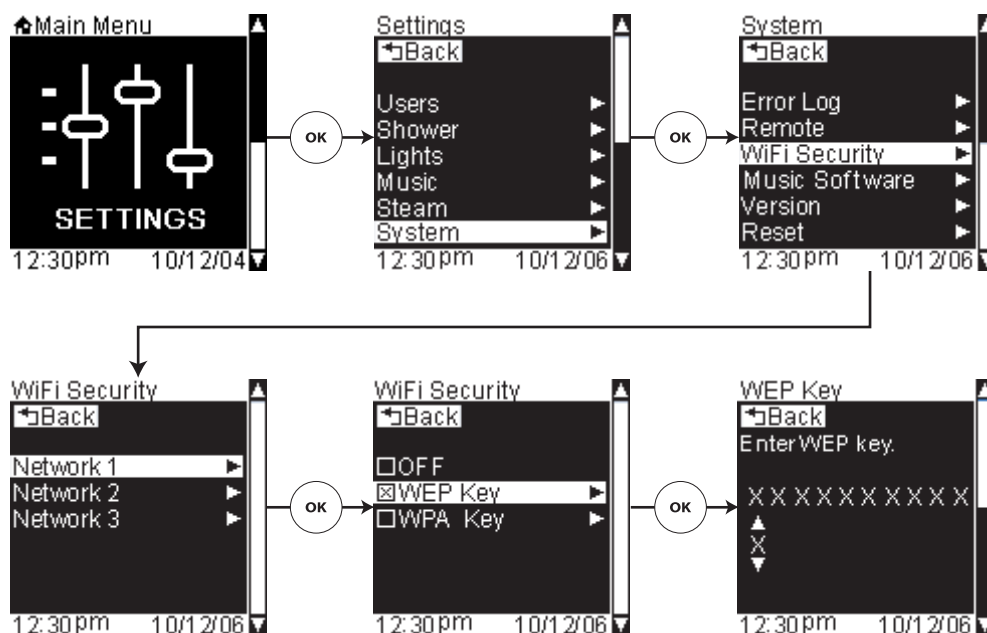

WiFi Security

 
Path: Settings > System > WiFi Security

This menu item will not be visible if the system detects an Ethernet connection.

Your WiFi network password (WEP/WPA key) can be obtained from the software provided with your wireless access point. You will have either a WEP key or a WPA key, not both. Your network may also be configured without a WEP/WPA key; in this case select OFF when prompted to select a key type. "OFF" is the default for each detected server.

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "WiFi Security."
- Press the [OK Icon] to select. All detected servers will be listed.
- Scroll to the server that you want to access.
- Press the [OK Icon] to select.
- Scroll to and select "OFF," "WEP Key," or "WPA Key."
- Use the dial to scroll to the first digit in the code.
- Press the [OK Icon] to set the selected number and proceed to the next digit.
- Repeat for all digits of the code.
- Once the last digit of the code is selected, press and hold the [OK Icon] for 2 seconds to set.

If a valid WEP/WPA key has been entered, you will return to the server selection screen. If an invalid key is entered, the screen will be cleared allowing you to re-enter the key.

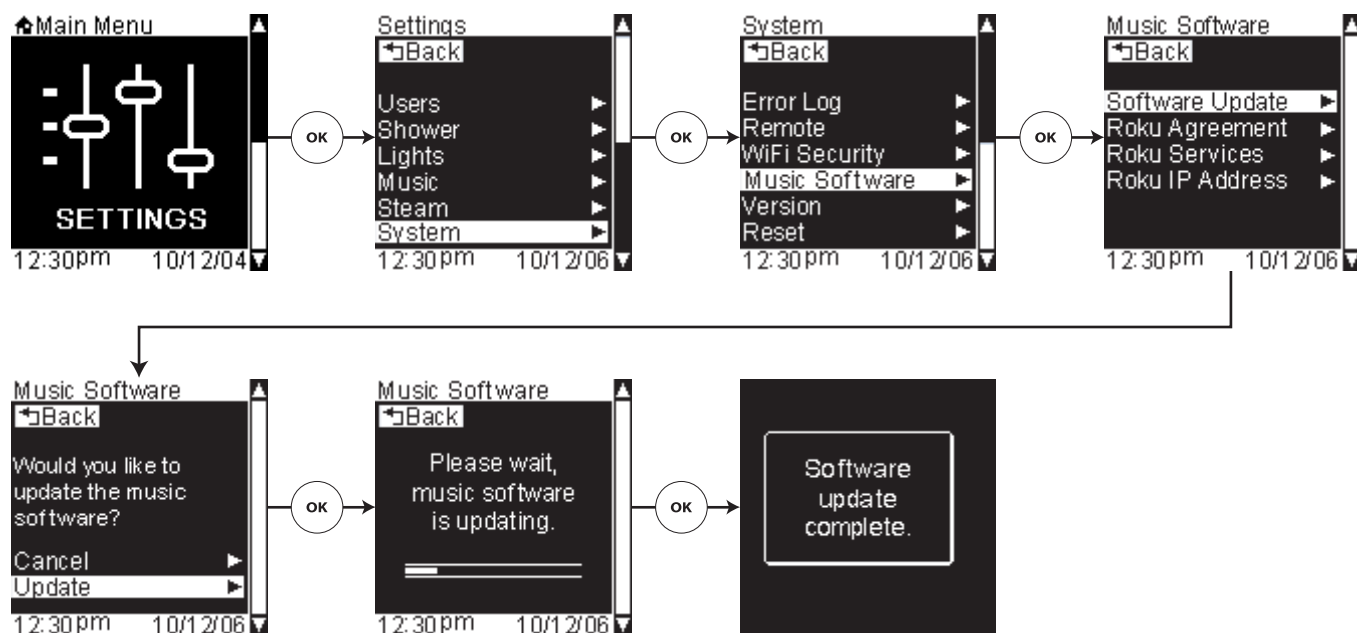


Update Music Software

Path: Settings > System > Music Software > Software Update

NOTICE: You must have a high-speed internet connection to update.

This feature updates your Roku music software to the latest version.

 - From the Main Menu scroll to “Settings.”
- Press the [OK Icon] to select.
- Using the dial, scroll to and select “System.”
- Press the [OK Icon] to select.
- Scroll to “Music Software.”
- Press the [OK Icon] to select.
- Scroll to “Software Update.”
- Scroll to “Update.”
- Press the [OK Icon] to begin updating the software.

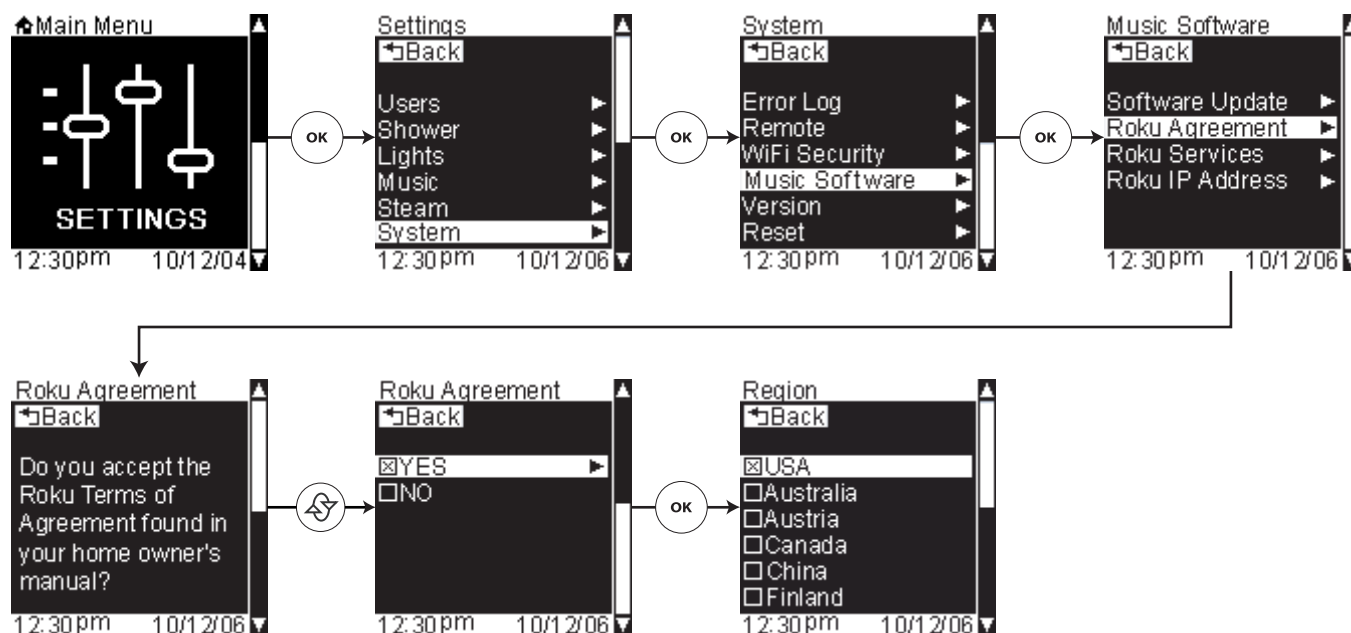


Roku Agreement

Path: Settings > System > Music Software > Roku Agreement

In order to begin streaming music from your music server and/or internet radio, you must first agree to the Roku Terms of Agreement. You will be prompted to accept this agreement at initial start-up or system reset. If "Yes" is selected, this menu option will not be displayed on the Music Software Settings screen.

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Music Software."
- Press the [OK Icon] to select.
- Scroll to "Roku Agreement" and press the [OK Icon] to select.
- Scroll to the bottom of the screen.
- Scroll to "Yes" to accept the terms of the agreement and activate the music server menu options.
- Press the [OK Icon] to select.
- Scroll to your region.
- Press the [OK Icon] to set.

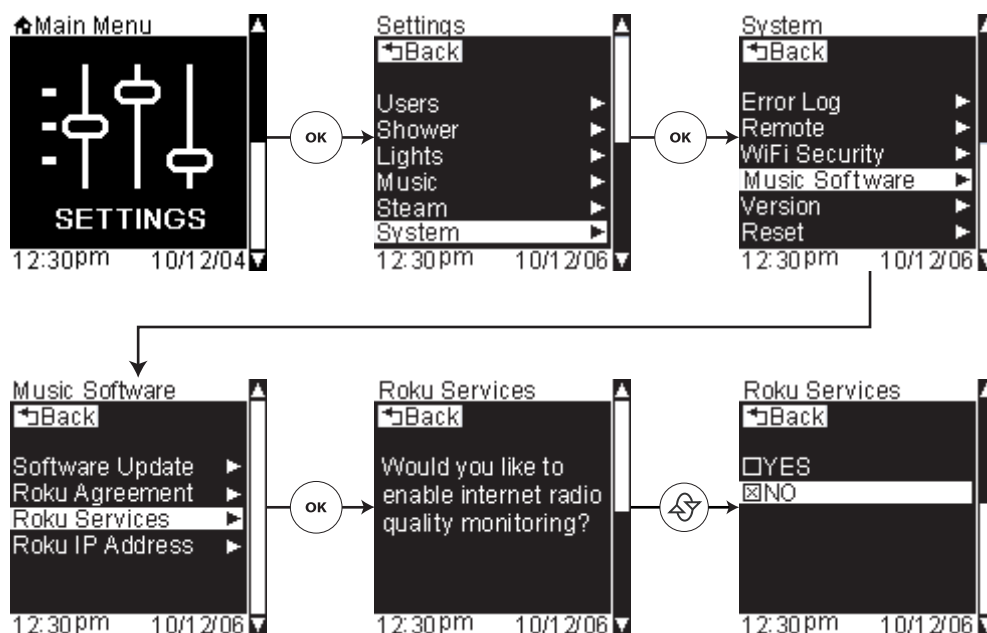


Roku Services

Path: Settings > System > Music Software > Roku Services

Internet radio quality monitoring is a service offered by Roku. This service tracks which internet radio stations people in your region are listening to along with which stations will give you the best connection quality and speed.

 - From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Music Software."
- Press the [OK Icon] to select.
- Scroll to "Roku Services." You will be prompted to disable internet radio quality monitoring.
- Scroll to "NO."
- Press the [OK Icon] to select.

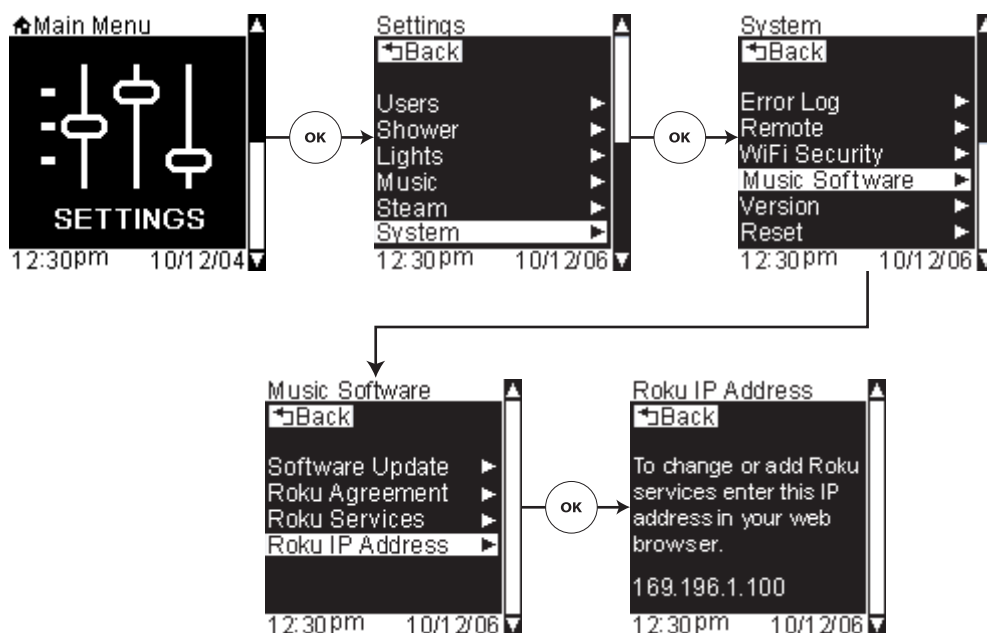

Roku IP Address

Path: Settings > System > Music Software > Roku IP Addresses


The Roku IP address screen is used to display the current IP address the Roku WMM has been assigned. Enter this IP address into a web browser address bar to access Roku's embedded webpage. There are several settings which can be accessed such as preset radio stations and volume.

- From the Main Menu scroll to "Settings."
- Press the [OK Icon] to select.
- Using the dial, scroll to and select "System."
- Press the [OK Icon] to select.
- Scroll to "Music Software."
- Press the [OK Icon] to select.
- Scroll to "Roku IP Addresses."
- Press the [OK Icon] to select.

Version

Path: Settings > System > Version

FACTORY USE ONLY

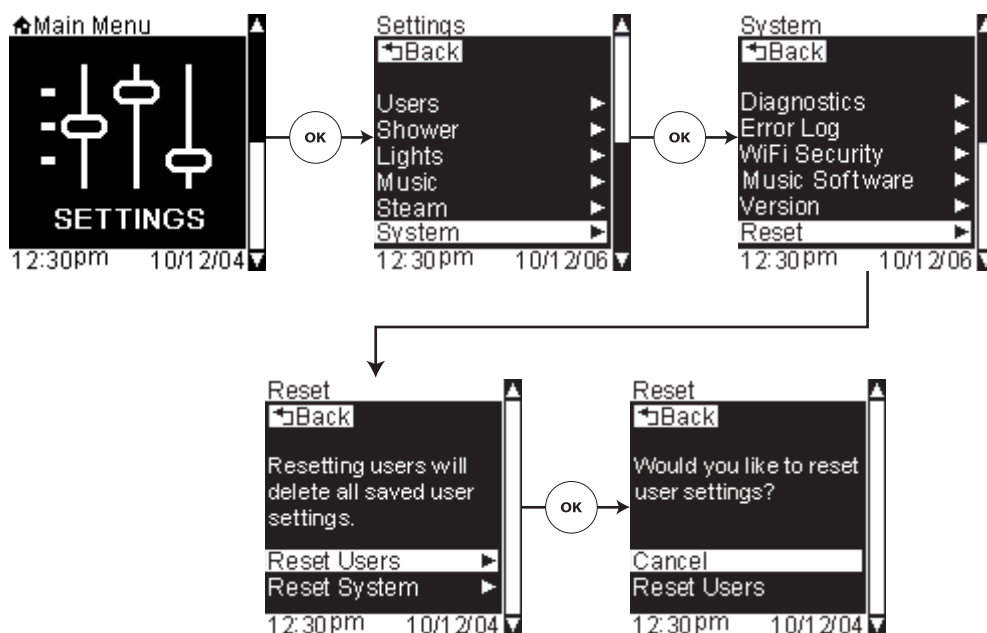


Reset Function – User Settings

Path: Settings > System > Reset > Reset User > Cancel or Reset Users

This function allows you to delete all saved user settings while keeping all other device settings.

- Scroll to “Reset” from the settings menu.
- Press the [OK Icon] to select.
- Scroll to “Reset User.”
- Press the [OK Icon] to select.
- To keep all the current user settings, scroll to “Cancel.”
- To clear all user settings, scroll to “Reset Users.”
- Press the [OK Icon] to select.

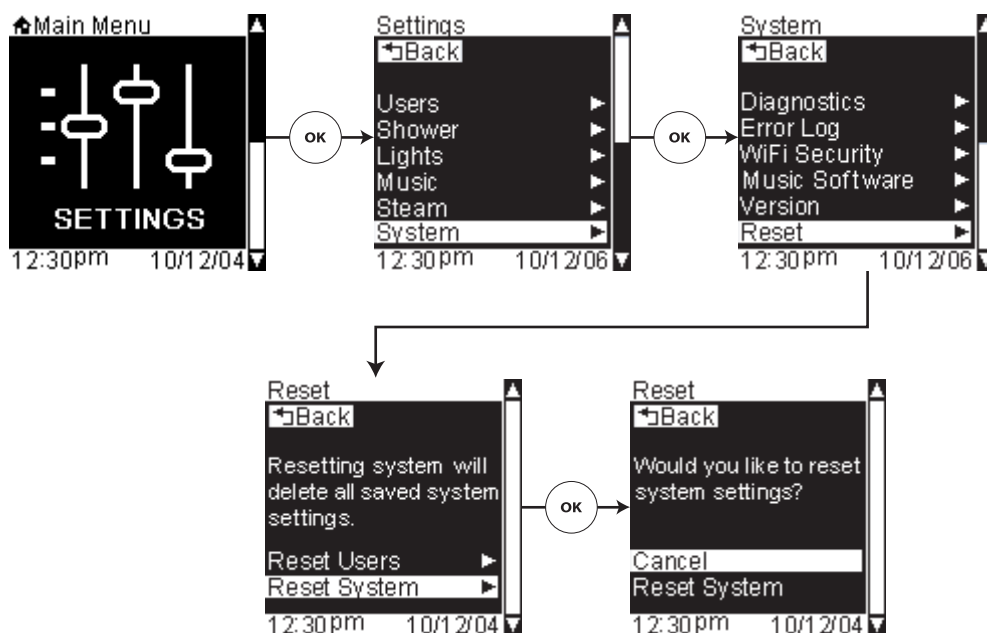


Reset Function – System

Path: Settings > System > Reset > Reset System > Cancel or Reset System

IMPORTANT! Resetting the system will return your interface to the original factory default settings. This will also delete any custom configurations or settings.

Once you select this option, you will be prompted to select either “Cancel” or “Reset System.”

 - Scroll to “Reset” from the settings menu.
- Press the [OK Icon] to select.
- Scroll to “Reset System.”
- Press the [OK Icon] to select.
- To keep all the current interface settings, scroll to “Cancel.”
- To return to the original settings, scroll to “Reset System.”
- Press the [OK Icon] to select.

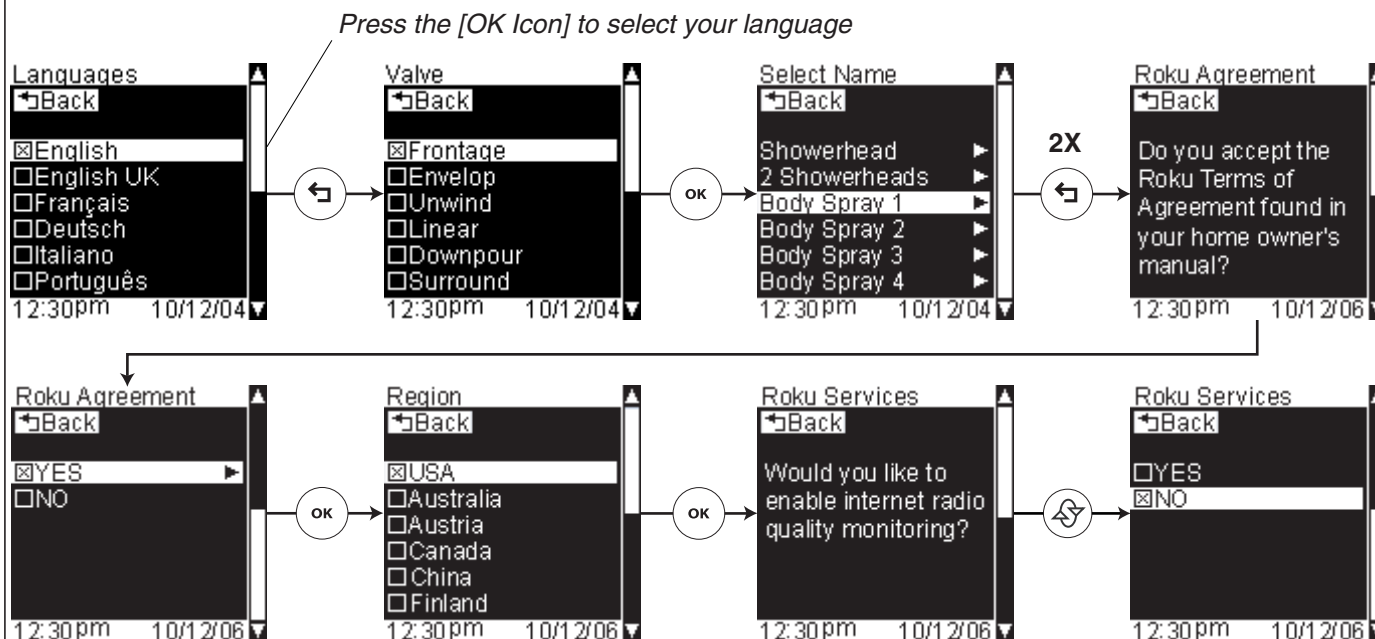

Start-up After System Reset

After a system reset you will be prompted to set your language and shower configuration.

- Press the [Power Icon] to turn on the interface.
- Scroll to your language.
- Press the [OK Icon] to select.
- Press the [Back Icon] to set.
- Scroll to the configuration* of your shower.
- Press the [OK Icon] to select. The Select Name screen will be displayed.

NOTE: Your outlet names will be listed in order from outlet 1 to outlet 6. This screen allows you to change the outlet display name only and will not change the outlet cycling order during massage.

If the outlet names listed are correct for your system:

- Press the [Back Icon] twice to set. The Roku Agreement screen will now be displayed.

To rename outlets display names:

- Scroll to the outlet to be renamed.
- Press the [OK Icon] to select.
- Scroll to the new outlet name.
- Press the [OK Icon] to select. The new name will now be displayed.
- Repeat for remaining outlets as needed.
- Press the [Back Icon] twice to set. You will be prompted to accept the Roku Terms of Agreement.
- Scroll to the bottom of the screen.
- Scroll to "Yes" to accept the terms of agreement and activate music server menu options.
- Press the [OK Icon] to select.
- Scroll to your region.

Start-up After System Reset (cont.)

- Press the [OK Icon] to set. You will be prompted to disable Internet quality monitoring.
- Scroll to “No” to disable.
- Press the [OK Icon] to select.

* Refer to the “Configurations” section for illustrations and descriptions of the preconfigured options. For Custom configurations, proceed to “Set the Valve Configuration - Custom Options.”

Music Server Set-up – Getting Started

Your system contains a network music player that does not store any files; instead, it plays files stored on a network computer. The software in your system communicates with the music server software allowing you to access and play the music files stored on your computer.

Before you can stream audio from your home computer to your shower, you must first complete the following:

- Verify you have a compatible music server installed on your computer. Refer to the “Compatible Music Servers” section.
- Connect your system to your computer network via WiFi or Ethernet. An Ethernet cable can be plugged in directly to the media module or a wireless access point must be in range for WiFi connections.
- Establish a network connection. If your network is secured, you will need to enter the WEP or WPA key. Refer to the “WiFi Security” section.
- Enable music sharing (if required by your music server). Refer to the “Enable Music Sharing” section.

Compatible Music Servers

- If not already installed, install a compatible music server at this time.

| Music Server | Recommended for Users of: | Notes |
|-----------------------|---|---|
| Windows Media Connect | Windows XP with SP2 | A free media server from Microsoft. Works with any music jukebox, but optimized for Windows Media Player v.10. Plays: WMA, DRM WMA, WMA Lossless, MP3, WAV, playlists created in jukebox software such as Windows Media Player 10. |
| iTunes | PC/Mac | A free music server and jukebox software from Apple. Plays: AAC, MP3, WAV, AIFF (no support for protected AAC iTunes Music Store files). Also plays playlists and Smart Playlists created in iTunes. Built-in Internet radio tuner streams Internet radio |
| Rhapsody | Rhapsody Subscribers | A server is required to run the Rhapsody Music Service, which includes access to popular music and Internet radio. |
| Musicmatch Jukebox | Windows 98 SE/Me/XP/2000 (SP3 or above) | Popular jukebox software and music service. You can also use Windows Media Connect with Musicmatch, which is more feature-rich. Plays: WMA, MP3, WAV (DRM WMA and Musicmatch playlists supported only if using Windows Media Connect Server). |

Compatible Music Servers (cont.)

| Music Server | Recommended for Users of: | Notes |
|----------------------|---------------------------|---|
| Firefly Media Server | PC/Mac/Linux | This high quality “open source” media server will serve music in many formats (WMA, MP3, AAC, FLAC, Apple Lossless and Ogg Vorbis). It integrates directly with iTunes and can share your iTunes music library, or any music library. As with all non-apple products, it does NOT support Protected AAC files. It does not support protected WMA files. |

Enable Music Sharing

In order to see the music server from your system, you must first enable music sharing.

Enabling Sharing in Windows Media Connect

- Click the Windows Media Connect tray icon or open Windows Media Connect through the Windows Control Panel. The media server appears in the notification area in the bottom-right corner of the window.
- Open the Wizard window, click the media server and then click “Allow.”
- Windows Media Connect will now authorize the media server.
- Click Close.

Enabling Sharing in Firefly Media Server

- You do not need to enable the Firefly Media Server to share music.

NOTE: Firefly must be running in order to access your music from the system.

Enabling Sharing in iTunes

- Select iTunes/Preferences menu (Mac) or Edit/Preferences (PC).
- In the dialog box that appears, click the Sharing tab.
- Verify that the Share My Music option to enable sharing on your local network is selected.

IMPORTANT! Do not assign a password.

NOTE: iTunes must be running to play music from your library.

Enabling Sharing in Rhapsody

- Make sure the Rhapsody application is running.
- Select User Settings from the Options menu.
- Navigate to the UPnP tab, and then click Start to start the server.
- Select the “Start UPnP server once logged in” option so that the server starts each time you run the Rhapsody application.

Your Rhapsody server should now appear in you list of available music servers. You can now access your songs and Rhapsody radio stations.

NOTE: Rhapsody must be running to enable automatic log in.

Enabling Sharing in Musicmatch

- Select Options/Settings.

Enable Music Sharing (cont.)

- Click the CD Lookup/Connectivity tab.
- Select Enable Music Server and then select Universal Plug and Play. You can close Musicmatch if you like — the UPnP server will keep running in the background.

Adding Internet Stations

- The media module currently supports MP3 and WMA Internet radio stations. RealAudio and AACplus stations are not supported at this time.

Adding Internet Stations via the Website:

- Enter the device IP address into a web browser address bar. For information on getting your device IP address, refer to the "Roku IP Address" section.
- Select the "Presets" hyperlink.
- Enter the name and URL for the new internet radio station(s) into the desired preset station fields.
- Click "Update Presets."

Using iTunes to Play Internet Stations:

If you want to listen to a station that is not among the built-in list of stations, you can use iTunes to connect to that station, and then listen to it on your system. (Windows Media Connect users can continue to use WMC for your music library, and just use iTunes for this feature.)

To play Internet radio stations with the iTunes music server through the media module:

- In iTunes, create a new playlist (for example, let's call it "RadioFavorites").
- Find the stations that you would like to play; browse the iTunes Internet radio station list by clicking on the Radio button on the Source tray of iTunes, or import a specific URL from its online source.
- Drag and drop the stations you like into the "RadioFavorites" playlist. The result is an iTunes playlist that contains your favorite radio stations.
- Play this playlist on your system. Connect to your iTunes Music Library by selecting the name of your library.
- Once connected to your library, select "Playlists."
- Scroll down to the saved playlist (in our example, "RadioFavorites") and select it. You can now scroll through your favorite radio stations.
- Select a station to begin streaming. Refer to the "Internet Radio" section.

USA: 1-800-4-KOHLER
Canada: 1-800-964-5590
México: 001-877-680-1310

kohler.com

THE BOLD LOOK
OF **KOHLER®**

©2007 Kohler Co.

1079815-5-A